



# FLOAT

REAR SHOCK

## TUNING GUIDE



## SAG SETTING

To achieve the best performance from your FOX suspension, adjust the air pressure to attain your proper sag setting. Sag is the amount your suspension compresses under your weight and riding gear. Sag range should be set to 25-30% of total shock travel.

Watch the sag setup video at [ridefox.com/sagsetup](http://ridefox.com/sagsetup)

1. Turn the 3-position lever to the OPEN mode.
2. Start by setting the shock air pressure (psi) to match your weight in pounds. With the air pump attached to the shock valve, slowly cycle your shock through 25% of its travel 10 times as you reach your desired pressure. This will equalize the positive and negative air chambers and will change the pressure on the pump gauge.
  - ⚠ **Do not exceed maximum air pressure:**  
Non-EVOL air shocks have a maximum pressure of 300psi.  
EVOL air shocks have a maximum pressure of 350psi.
3. Remove the pump.
4. Sit still on the bike in your normal riding position, using a wall or a tree for support.
5. Pull the sag indicator o-ring up against the rubber air sleeve seal.
6. Carefully dismount the bike without bouncing.
7. Measure the distance between the sag indicator o-ring and the rubber air sleeve seal. Compare your measurement to the 'Suggested Sag Measurements' table.
8. Add or remove air pressure until you reach your desired sag measurement.



## EVOL AIR SLEEVE

EVOL comes factory installed on FLOAT X2, and is available as an option for FLOAT DPS and FLOAT X.

### ADDING AIR PRESSURE

Equalize the positive and negative air chambers by slowly compressing the shock through 25% of its travel 10-20 times after every 50 psi addition. Failure to equalize the chambers can result in greater pressure in the positive air chamber than the negative chamber. If the shock feels very stiff and is in the topout position, compress the shock until you hear or feel air transfer. Hold the shock in this compressed position for a few seconds.

### RELEASING AIR PRESSURE


Release air slowly so the air from the negative chamber can also be released through the Schrader valve. Releasing the air pressure too quickly can cause the negative chamber to have more pressure than the positive chamber. If the shock is compressed into its travel and does not fully extend, add air pressure until the shock extends, then slowly compress the shock through 25% of its travel 10-20 times.



The recommended settings in this tuning guide are designed to be a **starting point**, in order to get you out on your first ride in as few steps as possible. Consult your bike manufacturer's instructions for setup recommendations.

As you ride and get used to your new shock, adjust your settings as needed. Detailed information and videos can be found in the online owner's manual.

Your shock has a 4 digit ID code on the shock body. Use this number on the Help page at [www.ridefox.com](http://www.ridefox.com) to find out more information about your shock, including shock travel.

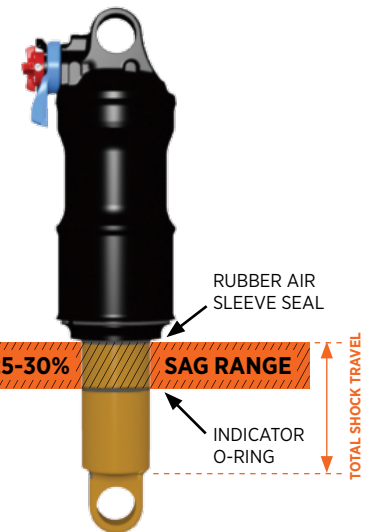


Suggested Sag Measurements		
Travel	25% sag (Firm)	30% sag (Plush)
38 mm (1.5 in)	10 mm (0.38 in)	11 mm (0.45 in)
44 mm (1.75 in)	11 mm (0.44 in)	13 mm (0.53 in)
51 mm (2 in)	13 mm (0.50 in)	15 mm (0.60 in)
57 mm (2.25 in)	14 mm (0.56 in)	17 mm (0.68 in)
63 mm (2.5 in)	16 mm (0.63 in)	19 mm (.75 in)

## COMPRESSION ADJUSTMENTS

### 3-POSITION LEVER

Begin with the 3-position lever in the OPEN mode.

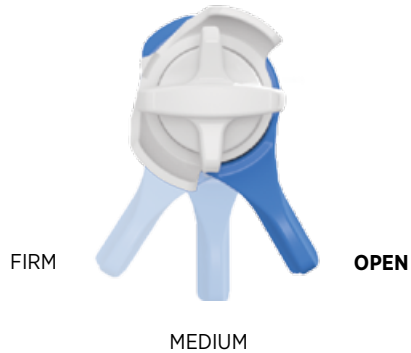

The **3-position** lever is useful to make on-the-fly adjustments to control shock performance under significant changes in terrain, and is intended to be adjusted throughout the ride.

Use the OPEN mode during rough descending, the MEDIUM mode for undulating terrain, and the FIRM mode for smooth climbing.

### \*OPEN MODE ADJUST

Set the open mode adjust to setting 1.



**Open mode adjust** is useful to control shock performance during rider weight shifts, G-outs, and slow inputs.

Open mode adjust provides 3 additional fine tuning adjustments for the OPEN mode.

Lift the open mode adjuster, rotate it to the 1, 2, or 3 position, and press it in to lock the position. It is recommended to make these adjustments with the 3-position lever in the Medium or Firm mode.

Setting 1 will have a more plush feel and setting 3 will have a firmer feel.

\*Factory Series and Performance Elite Series shocks only

## REBOUND ADJUSTMENT

The rebound adjustment is dependent on the air pressure setting. For example, higher air pressures require slower rebound settings. Use your air pressure to find your rebound setting.


**Turn your rebound knob to the closed position (full clockwise) until it stops. Then back it out (counter-clockwise) to the number of clicks shown in the table below.**

### REBOUND



**Rebound** controls the rate of speed at which the shock extends after compressing.

Air Pressure (psi)	Recommended Rebound Setting
<100	Open (counter-clockwise)
100-120	11
120-140	10
140-160	9
160-180	8
180-200	7
200-220	6
220-240	5
240-260	4
260-280	3
280-300	Closed (clockwise)

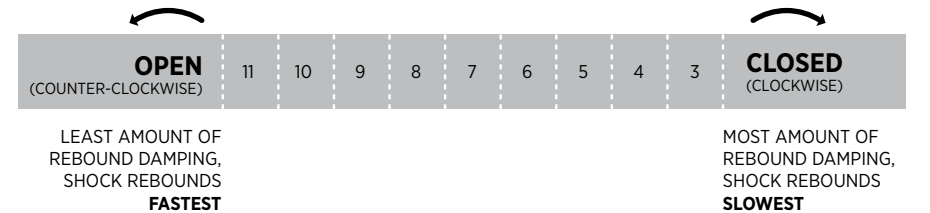





©FOX FACTORY, INC. 2016 // 1.800.FOX.SHOX  
915 Disc Drive · Scotts Valley, CA 95066 USA  
**TEL** 831.768.1100

605-00-164 REV A

