

BOOMUPERATOR

Product by OISPHOOT

Notes for initial setup


This initial set up using a **left** leading arm should only need to be done once simply to adjust the straps to your body size and comfort after which you will be able to use the BoomUperator for either right or left leading arms with just a few quick adjustments.

Firmly tighten waist belt using strap so that the base plate is positioned above your left hip and the sliding 1" female buckle is on your right.

Place cross body shoulder strap so that the retractable leash is on very top of your left shoulder in line with the base plate on the waist belt.

Adjust the shoulder strap to the correct length for your body height so that with the retractable leash still on top of your shoulder the male 1" buckle can comfortably attach to the sliding 1" female buckle on the waist belt.

NOTE. This will take some adjusting and finessing to find the right placement for the adjustable buckles and straps.

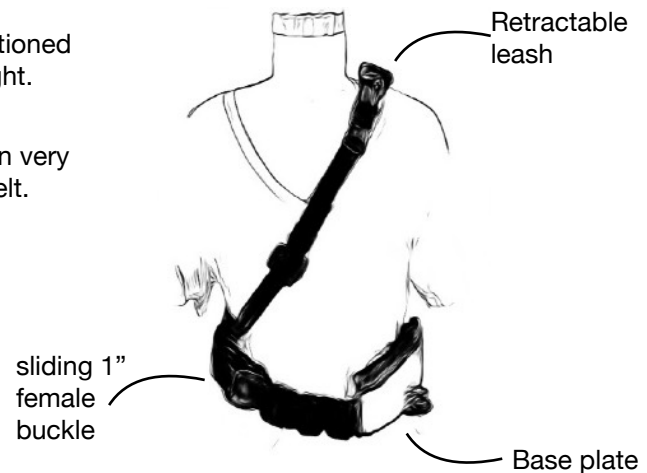


When waist belt and shoulder strap have been tightened to fit and everything is comfortable the excess lengths can be cut with scissors to reduce unwanted webbing and either singed with a small flame or capped off with supplied webbing tips.



Important note

WITH THE WAIST AND CROSSBODY STRAPS CONNECTED TO EACH OTHER THE RETRACTABLE LEASH MUST REMAIN FIRMLY ON TOP OF YOUR LEFT SHOULDER IN LINE WITH THE BASE PLATE AND BOTH STRAPS MUST FEEL TIGHT AND SECURE.

Attach the carabiner on the retractable shoulder leash to the D-ring on the UPstick

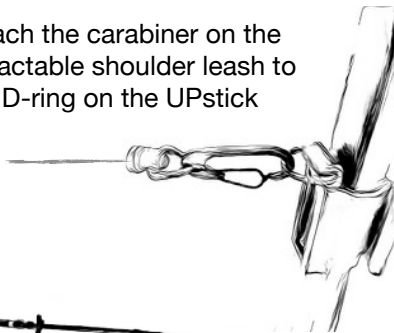


With the UPstick in place and properly attached to the receiver base plate it can be raised or lowered carefully with one hand using the clamping latches.

NOTE. You should ALWAYS keep one hand on the UPstick to help support the weight.

Insert the UPstick into the base plate receiver through the Eye guide with the logo facing you so that you hear and feel the click.

NOTE. The receiver button underneath should be pressed in so that the ball latch on the UPstick will engage when pressed into the ball latch receiver.

To release the UPstick from base plate press the receiver button underneath

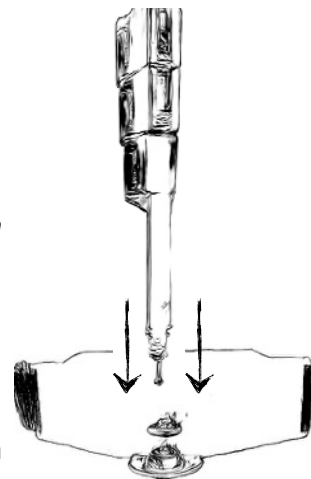

Important note

If intending to lead with your left arm whilst booming, the base plate receiver and retractable shoulder leash should be on the left side of your body. If intending to lead with your right arm, the base plate receiver should be on the right side of your body and the cross body strap put on the other way so that the retractable leash sits on top of your right shoulder. Switching back and forth between the two requires moving the sliding female loop buckle around the belt so as to be on the opposite side to the base plate allowing the cross body strap to be connected in a similar fashion either way.

Further Tips for best use can be found at WWW.BOOMUPERATOR.COM