

ABBREVIATED CHECKLIST

# SR20

WITH CIRRUS PERSPECTIVE+ AVIONICS



# **Abbreviated Checklist**

for  
SR20 Serials 2220, 2339 and Subsequent  
with Cirrus Perspective+ Avionics with Garmin System Software  
2647.N4 or later



The procedures in this publication are abbreviated and derived from procedures in the FAA Approved Airplane Flight Manual and Pilot's Operating Handbook (POH) P/N 11934-005, Revision A1. These procedures do not supersede the procedures in the POH. In the event of conflict, the POH shall take precedence.

**CIRRUS** ABBREVIATED CHECKLIST

MODEL SR20

**Normal Procedures****Table of Contents**


Primary Flight Display .....	N-1
Airspeeds for Normal Operation .....	N-2
Preflight Inspection .....	N-3
Before Starting Engine .....	N-6
Engine Start .....	N-7
Before Taxiing .....	N-7
Taxiing .....	N-7
Before Takeoff .....	N-8
Normal Takeoff .....	N-9
Short Field Takeoff.....	N-9
Climb.....	N-9
Cruise .....	N-9
Cruise Leaning .....	N-10
Descent.....	N-10
Before Landing.....	N-10
Normal Landing.....	N-10
Short Field Landing .....	N-11
Balked Landing/Go-Around.....	N-11
After Landing.....	N-11
Shutdown .....	N-11

# CIRRUS ABBREVIATED CHECKLIST


MODEL SR20

## Primary Flight Display

PFD LEGEND

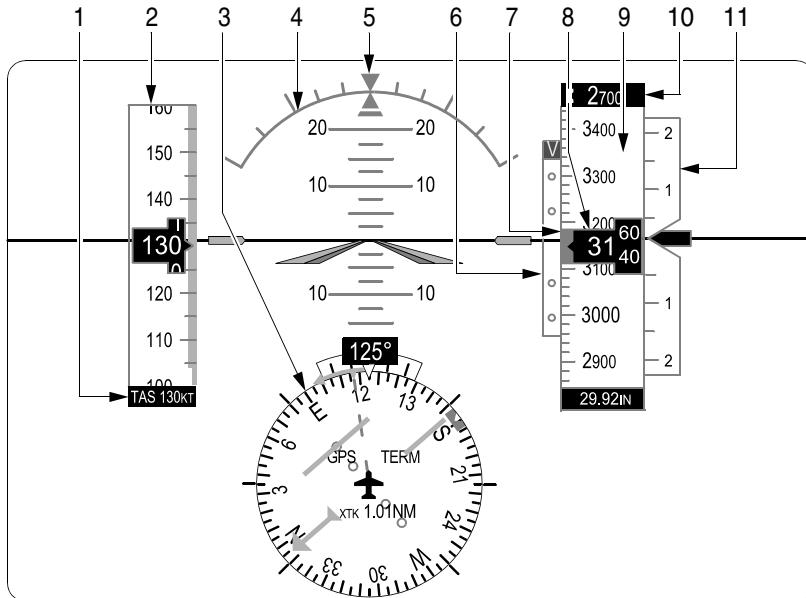

- LEGEND**
- True Airspeed
  - Airspeed Indicator
  - Horizontal Situation Indicator (HSI)
  - Attitude Indicator
  - Slip/Skid Indicator
  - Vertical Deviation Indicator (VDI)
  - Selected Altitude Bug
  - Current Altitude
  - Altimeter
  - Selected Altitude
  - Vertical Speed Indicator (VSI)
  - Current Heading
  - Lubber Line
  - Selected Heading Bug
  - Flight Phase
  - Navigation Source
  - Aircraft Symbol
  - Course Deviation Scale
  - Rotating Compass Rose
  - Course Pointer

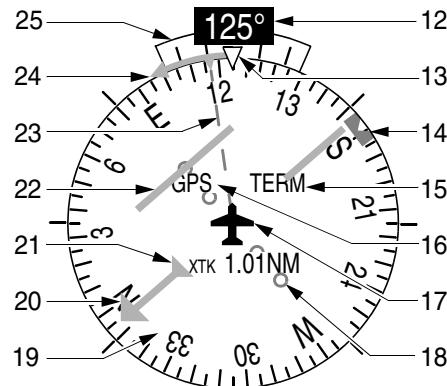

HSI DETAIL

Typical View

- To/From Indicator
- Course Deviation Indicator
- Current Track Indicator
- Turn Rate/Heading Trend Vector
- Turn Rate Indicator

SR20\_FM07\_5348

**CIRRUS** ABBREVIATED CHECKLIST MODEL SR20**Airspeeds for Normal Operation****Takeoff:**

- Normal, Flaps 50% ..... 71-75 KIAS
- Short Field, Flaps 50% ..... 71 KIAS
- Obstacle Clearance, Flaps 50% ..... 81 KIAS

**Enroute Climb, Flaps Up:**

- Normal, SL ..... 96 KIAS
- Normal, 10,000' ..... 92 KIAS
- Best Rate of Climb, SL ..... 96 KIAS
- Best Rate of Climb, 10,000' ..... 92 KIAS

**Landing Approach:**

- Normal Approach, Flaps Up ..... 89 KIAS
- Normal Approach, Flaps 50% ..... 84 KIAS
- Normal Approach, Flaps 100% ..... 78 KIAS
- Short Field, Flaps 100% ..... 78 KIAS

**Go-Around, Flaps 50%:**

- Full Power ..... 81 KIAS

**Maximum Recommended Turbulent Air Penetration:**


- 3150 lb ..... 133 KIAS
- 2700 lb ..... 123 KIAS
- 2300 lb ..... 114 KIAS

**Maximum Demonstrated Crosswind Velocity:**

- Takeoff or Landing ..... 20 Knots

**CIRRUS** ABBREVIATED CHECKLIST MODEL SR20

PREFLIGHT

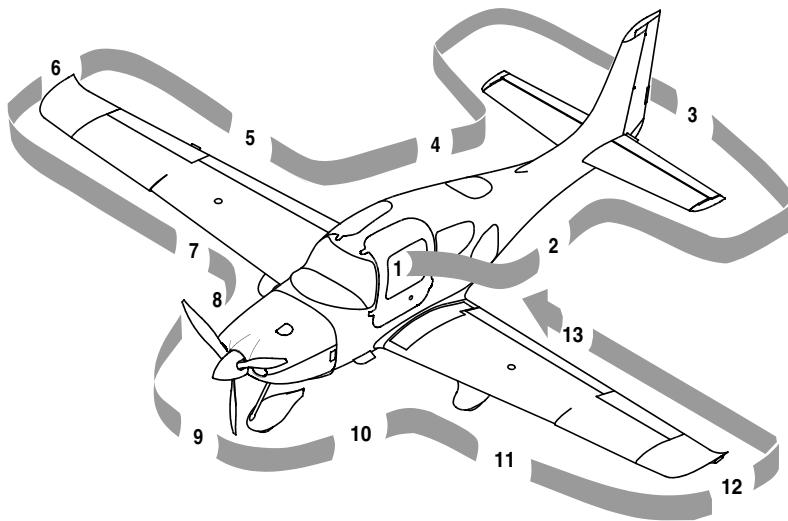

SR22\_FM04\_1454

## Preflight Inspection

1. Cabin
  - a. Required Documents ..... ON BOARD
  - b. AVIONICS Switch..... OFF
  - c. BAT 2 Switch ..... ON
  - d. PFD ..... VERIFY ON
  - e. Essential Bus Voltage ..... 23-25 VOLTS
  - f. Flap Position Light..... OUT
  - g. BAT 1 Switch ..... ON
  - h. Avionics Cooling Fan..... AUDIBLE
  - i. AVIONICS Switch..... ON
  - j. Fuel Quantity ..... CHECK
  - k. Fuel Selector ..... SELECT FULLER TANK
  - l. Flaps ..... 100%, CHECK LIGHT ON
  - m. Lights..... CHECK OPERATION
  - n. Stall Warning System Inlet ..... UNOBSTRUCTED

*(Continued on following page)*

**CIRRUS** ABBREVIATED CHECKLIST MODEL SR20

- o. Stall Warning ..... TEST
  - p. Pitot Heat ..... ON
    - (1) Verify probe is hot.
  - q. Pitot Heat ..... OFF
  - r. AVIONICS Switch ..... OFF
  - s. BAT 1 and BAT 2 Switches ..... OFF
  - t. Alternate Static Source ..... NORMAL
  - u. Circuit Breakers ..... IN
  - v. Fire Extinguisher ..... CHARGED AND AVAILABLE
  - w. Emergency Egress Hammer ..... AVAILABLE
  - x. CAPS Handle ..... PIN REMOVED
2. Left Fuselage
- a. Door Lock ..... UNLOCK
  - b. COM 1 Antenna (top) ..... CONDITION AND ATTACHMENT
  - c. Transponder Antenna (underside) ..... CONDITION AND ATTACHMENT
  - d. COM 2 Antenna (underside) ..... CONDITION AND ATTACHMENT
  - e. Wing/Fuselage Fairing ..... CHECK
  - f. Baggage Door ..... CLOSED AND SECURE
  - g. Static Button ..... CHECK FOR BLOCKAGE
  - h. Parachute Cover ..... SEALED AND SECURE
3. Empennage
- a. Tiedown Rope ..... REMOVE
  - b. Horizontal and Vertical Stabilizers ..... CONDITION
  - c. Elevator and Tab ..... CONDITION AND MOVEMENT
  - d. Rudder ..... FREEDOM OF MOVEMENT
  - e. Rudder Trim Tab ..... CONDITION AND SECURITY
  - f. Attachment hinges, bolts, and cotter pins ..... SECURE
4. Right Fuselage
- a. Static Button ..... CHECK FOR BLOCKAGE
  - b. Wing/Fuselage Fairings ..... CHECK
  - c. Door Lock ..... UNLOCK

*(Continued on following page)*

**CIRRUS** ABBREVIATED CHECKLIST MODEL SR20

5. Right Wing Trailing Edge
  - a. Flap and Rub Strips (if installed) ..... CONDITION AND SECURITY
  - b. Aileron and Tab ..... CONDITION AND MOVEMENT
  - c. Aileron Gap Seal ..... SECURITY
  - d. Hinges, Actuation Arm, Bolts, and Cotter Pins ..... SECURE
6. Right Wing Tip
  - a. Tip ..... ATTACHMENT
  - b. Wing Tip Light and Lens ..... CONDITION AND SECURITY
  - c. Fuel Vent (underside) ..... UNOBSTRUCTED
7. Right Wing Forward and Main Gear
  - a. Leading Edge and Stall Strips ..... CONDITION
  - b. Fuel Cap ..... CHECK QUANTITY AND SECURE
  - c. Fuel Drains (2 underside) ..... DRAIN AND SAMPLE
  - d. Wheel Fairings ..... SECURITY, ACCUMULATION OF DEBRIS
  - e. Tire ..... CONDITION, INFLATION, AND WEAR
  - f. Wheel and Brakes ..... FLUID LEAKS, EVIDENCE OF OVERHEATING, GENERAL CONDITION, AND SECURITY
  - g. Chocks and Tiedown Ropes ..... REMOVE
8. Nose, Right Side
  - a. Engine Oil ..... CHECK 6-7 QUARTS, LEAKS
  - b. Engine Oil Dipstick/Filler Cap & Door ..... SECURE
  - c. Ice Inspection Light ..... CONDITION AND SECURITY
  - d. Cowling ..... ATTACHMENTS SECURE
  - e. Exhaust Pipe .... CONDITION, SECURITY, AND CLEARANCE
9. Nose Gear, Propeller, and Spinner
  - a. Tow Bar ..... REMOVE AND STOW
  - b. Strut ..... CONDITION
  - c. Wheel Fairing ..... SECURITY, ACCUMULATION OF DEBRIS
  - d. Wheel and Tire ..... CONDITION, INFLATION, AND WEAR
  - e. Propeller ..... CONDITION (INDENTATIONS, NICKS, ETC.)
  - f. Spinner ..... CONDITION, SECURITY, AND OIL LEAKS
  - g. Air Inlets ..... UNOBSTRUCTED

*(Continued on following page)*

**CIRRUS** ABBREVIATED CHECKLIST MODEL SR20

10. Nose, Left Side
  - a. Ice Inspection Light ..... CONDITION AND SECURITY
  - b. Cowling ..... ATTACHMENTS SECURE
  - c. External Power.....DOOR SECURE
  - d. Gascolator (underside)... DRAIN FOR 3 SECONDS, SAMPLE
11. Left Main Gear and Forward Wing
  - a. Wheel Fairings .... SECURITY, ACCUMULATION OF DEBRIS
  - b. Tire ..... CONDITION, INFLATION, AND WEAR
  - c. Wheel and Brakes..... FLUID LEAKS, EVIDENCE OF OVERHEATING, GENERAL CONDITION, AND SECURITY
  - d. Chocks and Tiedown Ropes ..... REMOVE
  - e. Fuel Drains (2 underside)..... DRAIN AND SAMPLE
  - f. Fuel Cap..... CHECK QUANTITY AND SECURE
  - g. Leading Edge and Stall Strips..... CONDITION
12. Left Wing Tip
  - a. Fuel Vent (underside).....UNOBSTRUCTED
  - b. Pitot Probe ..... COVER REMOVED, UNOBSTRUCTED
  - c. Wing Tip Light and Lens ..... CONDITION AND SECURITY
  - d. Tip .....ATTACHMENT
13. Left Wing Trailing Edge
  - a. Hinges, Actuation Arm, Bolts, and Cotter Pins..... SECURE
  - b. Aileron Gap Seal..... SECURITY
  - c. Aileron.....FREEDOM OF MOVEMENT
  - d. Flap and Rub Strips (If installed).....CONDITION AND SECURITY

**Before Starting Engine**

1. Preflight Inspection ..... COMPLETED
2. Weight and Balance..... VERIFY WITHIN LIMITS
3. Emergency Equipment ..... ON BOARD
4. Passengers.....BRIEFED
5. Seats, Seat Belts, and Harnesses .....ADJUST AND SECURE

# CIRRUS ABBREVIATED CHECKLIST

MODEL SR20

## Engine Start

1. External Power (If applicable) ..... CONNECT
2. Brakes ..... HOLD
3. BAT 1 and BAT 2 Switches ..... ON (CHECK VOLTS)
4. Strobe Lights ..... ON
5. Power Lever ..... OPEN ¼ INCH
6. Mixture ..... CUTOFF
7. Propeller Area ..... CLEAR
8. Fuel Pump ..... ON
9. Mixture ..... ADVANCE TO RICH  
UNTIL STABLE FUEL FLOW IS INDICATED (3-5 SECONDS)
10. Mixture ..... CUTOFF
11. Ignition Switch ..... START (RELEASE AFTER ENGINE STARTS)
12. Mixture ..... SMOOTHLY ADVANCE TO RICH  
(AFTER ENGINE STARTS)
13. Power Lever ..... RETARD (MAINTAIN 1000 RPM)
14. Oil Pressure ..... CHECK
15. Fuel Pump ..... OFF
16. ALT 1 and ALT 2 Switches ..... ON
17. AVIONICS Switch ..... ON
18. Engine Parameters ..... MONITOR
19. External Power (If applicable) ..... DISCONNECT

## Before Taxiing

1. Flaps ..... UP (0%)
2. Radios/Avionics ..... AS REQUIRED
3. Cabin Heat/Defrost ..... AS REQUIRED
4. Fuel Selector ..... SWITCH TANK

## Taxiing

1. Parking Brake ..... DISENGAGE
2. Brakes ..... CHECK
3. HSI Orientation ..... CHECK
4. Attitude Gyro ..... CHECK
5. Turn Coordinator ..... CHECK

**CIRRUS** ABBREVIATED CHECKLIST MODEL SR20**Before Takeoff**

1. Doors ..... LATCHED
2. CAPS Handle ..... VERIFY PIN REMOVED
3. Seat Belts and Shoulder Harness ..... SECURE
4. ECS Control Panel..... SET |
5. Air Conditioner..... RECIRC DISABLED
6. Fuel Quantity ..... CONFIRM
7. Fuel Selector ..... FULLER TANK
8. Flaps..... SET 50% AND CHECK
9. Autopilot..... CHECK AND DISCONNECT
10. Transponder..... SET
11. COM and NAV/GPS ..... SET
12. Brakes..... HOLD
13. Mixture..... AS REQUIRED |
14. Power Lever..... 2200 RPM
15. Alternator..... CHECK
  - a. Pitot Heat ..... ON
  - b. Navigation Lights..... ON
  - c. Landing Light..... ON
16. Voltage..... CHECK
17. Pitot Heat..... AS REQUIRED
18. Navigation Lights ..... AS REQUIRED
19. Landing Light..... AS REQUIRED
20. Magneto..... CHECK LEFT AND RIGHT
  - a. Ignition Switch..... R, NOTE RPM, THEN BOTH
  - b. Ignition Switch..... L, NOTE RPM, THEN BOTH
21. Engine Parameters ..... CHECK
22. Power Lever..... IDLE
23. Power Lever..... 1000 RPM |
24. Fuel Pump ..... ON
25. Flight Instruments, HSI, and Altimeter..... CHECK AND SET
26. Flight Controls ..... FREE AND CORRECT
27. Trim..... SET TAKEOFF
28. CAS Messages ..... CHECK

**CIRRUS** ABBREVIATED CHECKLIST MODEL SR20**Normal Takeoff**

1. Brakes.....RELEASE (STEER WITH RUDDER ONLY)
2. Power Lever.....FULL FORWARD
3. Engine Parameters.....CHECK
4. Elevator Control.....ROTATE SMOOTHLY AT 71-75 KIAS
5. At 85 KIAS, Flaps.....UP

**Short Field Takeoff**

1. Flaps.....50%
2. Brakes .....HOLD
3. Power Lever.....FULL FORWARD
4. Engine Parameters.....CHECK
5. Brakes.....RELEASE (STEER WITH RUDDER ONLY)
6. Elevator Control.....ROTATE SMOOTHLY AT 71 KIAS
7. Airspeed at Obstacle .....81 KIAS  
*When clear of obstacle:*
8. Flaps.....UP

**Climb**

1. Climb Power.....SET
2. Flaps.....VERIFY UP
3. Mixture .....LEAN AS REQUIRED FOR ALTITUDE
4. Engine Parameters.....CHECK
5. Fuel Pump .....AS REQUIRED

**Cruise**

1. Fuel Pump .....OFF
2. Cruise Power .....SET
3. Mixture .....LEAN AS REQUIRED
4. Engine Parameters .....MONITOR
5. Fuel Flow and Balance .....MONITOR

# CIRRUS

ABBREVIATED CHECKLIST

MODEL SR20

## Cruise Leaning

Mixture Description	Exhaust Gas Temperature
Best Power	100 °F Rich Of Peak EGT
Best Economy	Between Peak EGT and 50 °F Lean Of Peak EGT, depending on ambient conditions (ensuring no misfire)

## Descent

1. Altimeter ..... SET
2. Cabin Heat/Defrost ..... AS REQUIRED
3. Landing Light ..... ON
4. Fuel System ..... CHECK
5. Mixture ..... AS REQUIRED
6. Brake Pressure ..... CHECK

## Before Landing

1. Seat Belt and Shoulder Harness ..... SECURE
2. Fuel Pump ..... ON
3. Mixture ..... AS REQUIRED
4. Flaps ..... AS REQUIRED
5. Autopilot ..... AS REQUIRED

## Normal Landing

1. Flaps ..... 100%
2. Airspeed ..... 81-83 KIAS
3. Power Lever ..... AS REQUIRED  
*After touchdown:*
4. Brakes ..... AS REQUIRED

**CIRRUS** ABBREVIATED CHECKLIST MODEL SR20**Short Field Landing**

1. Flaps..... 100%
2. Airspeed ..... 78 KIAS
3. Power Lever..... AS REQUIRED  
*After clear of obstacles:*
4. Power Lever ..... REDUCE TO IDLE  
*After touchdown:*
5. Brakes..... MAXIMUM

**Balked Landing/Go-Around**

1. Autopilot..... DISENGAGE
2. Power Lever..... FULL FORWARD
3. Flaps..... 50%
4. Airspeed ..... BEST ANGLE OF CLIMB (81 KIAS)  
*After clear of obstacles:*
5. Flaps..... UP

**After Landing**

1. Power Lever ..... 1000 RPM
2. Fuel Pump ..... OFF
3. Flaps..... UP
4. Lights ..... AS REQUIRED
5. Pitot Heat..... OFF

**Shutdown**

1. Fuel Pump ..... OFF
2. Power Lever ..... IDLE
3. Mixture..... CUTOFF
4. All Switches ..... OFF
5. Magneto..... OFF
6. ELT ..... TRANSMIT LIGHT OUT
7. Chocks, Tie-downs, Pitot Covers ..... AS REQUIRED

**CIRRUS** ABBREVIATED CHECKLIST

MODEL SR20

**Performance****Table of Contents**

Takeoff Distance: 3150 LB.....	P-1
Takeoff Distance: 2600 LB.....	P-2
Cruise Performance .....	P-3
Cruise Performance .....	P-4
Landing Distance Table - Flaps 100% .....	P-5
Landing Distance Table - Flaps 50% .....	P-6
Landing Distance Table - Flaps 0% .....	P-7
Wind Components .....	P-8
Weight and Balance .....	P-9
Loading Calculations .....	P-9
Loading Data .....	P-10
Moment Limits .....	P-10
Temperature Conversion .....	P-11

## • Note •

*Aircraft with optional Air Conditioning System:* Brake Horsepower is reduced by approximately 6 BHP.

# CIRRUS ABBREVIATED CHECKLIST

MODEL SR20

## Takeoff Distance: 3150 LB

<b>Weight:</b> 3150 LB (1429 kg) <b>Approx. Speed at Liftoff:</b> 75 KIAS <b>Speed over 50 ft Obstacle:</b> 81 KIAS <b>Flaps:</b> 50% <b>Power:</b> Full Throttle <b>Mixture:</b> Set to top of GREEN ARC <b>Runway:</b> Dry, Paved, Level			<b>Headwind:</b> Subtract 10% for each 12 knots headwind. <b>Tailwind:</b> Add 10% for each 2 knots tailwind up to 10 knots. <b>Runway Slope:</b> Refer to POH. <b>Dry Grass:</b> Add 20% to ground roll. <b>Wet Grass:</b> Add 30% to ground roll. <b>Air Conditioner:</b> Add 300 ft to ground roll and 400 ft to distance over 50 ft obstacle if Air Conditioner is ON during takeoff.						
<b>PRESS ALT FT</b>	<b>DISTANCE FT</b>	<b>TEMPERATURE ~ °C</b>							
		0	10	20	30	40	50	ISA	
<b>SL</b>	<b>Grnd Roll</b>	1503	1623	1748	1877	2011	2150	1685	
	<b>50 ft</b>	2273	2443	2618	2799	2986	3179	2530	
<b>1000</b>	<b>Grnd Roll</b>	1653	1784	1921	2063	2210	2363	1825	
	<b>50 ft</b>	2491	2675	2867	3065	3270	3482	2732	
<b>2000</b>	<b>Grnd Roll</b>	1818	1962	2113	2269	2431	2599	1978	
	<b>50 ft</b>	2730	2932	3142	3359	3584	3817	2953	
<b>3000</b>	<b>Grnd Roll</b>	2002	2161	2326	2498	2676	2862	2145	
	<b>50 ft</b>	2995	3217	3447	3686	3932	4187	3195	
<b>4000</b>	<b>Grnd Roll</b>	2206	2381	2563	2753	2950	3154	2329	
	<b>50 ft</b>	3288	3532	3785	4048	4319	4599	3460	
<b>5000</b>	<b>Grnd Roll</b>	2433	2626	2827	3037	3254	3479	2530	
	<b>50 ft</b>	3614	3883	4161	4449	4747	5055	3749	
<b>6000</b>	<b>Grnd Roll</b>	2687	2900	3122	3353	3592	3841	2752	
	<b>50 ft</b>	3976	4272	4578	4895	5224	5563	4066	
<b>7000</b>	<b>Grnd Roll</b>	2969	3205	3450	3705	3970	4245	2995	
	<b>50 ft</b>	4379	4705	5042	5392	5754	6127	4414	
<b>8000</b>	<b>Grnd Roll</b>	3322	3586	3861	4146	4442	4750	3300	
	<b>50 ft</b>	4883	5246	5622	6013	6416	6833	4851	
<b>9000</b>	<b>Grnd Roll</b>	3752	4050	4360	4682	5017	5364	3669	
	<b>50 ft</b>	5495	5904	6328	6767	7221	7691	5380	
<b>10000</b>	<b>Grnd Roll</b>	4240	4577	4927	5291	5670	6062	4082	
	<b>50 ft</b>	6188	6649	7127	7621	8133	8663	5970	

# CIRRUS ABBREVIATED CHECKLIST

MODEL SR20

## Takeoff Distance: 2600 LB

<b>Weight:</b> 2600 LB (1179 kg) <b>Approx. Speed at Liftoff:</b> 69 KIAS <b>Speed over 50 ft Obstacle:</b> 75 KIAS <b>Flaps:</b> 50% <b>Power:</b> Full Throttle <b>Mixture:</b> Set to top of GREEN ARC <b>Runway:</b> Dry, Paved, Level				<b>Headwind:</b> Subtract 10% for each 12 knots headwind. <b>Tailwind:</b> Add 10% for each 2 knots tailwind up to 10 knots. <b>Runway Slope:</b> Refer to POH. <b>Dry Grass:</b> Add 20% to ground roll. <b>Wet Grass:</b> Add 30% to ground roll. <b>Air Conditioner:</b> Add 300 ft to ground roll and 400 ft to distance over 50 ft obstacle if Air Conditioner is ON during takeoff.			
<b>PRESS ALT FT</b>	<b>DISTANCE FT</b>	<b>TEMPERATURE ~ °C</b>					
		<b>0</b>	<b>10</b>	<b>20</b>	<b>30</b>	<b>40</b>	<b>50</b>
<b>SL</b>	<b>Grnd Roll</b>	913	986	1061	1140	1221	1305
	<b>50 ft</b>	1408	1513	1621	1732	1848	1967
<b>1000</b>	<b>Grnd Roll</b>	1004	1083	1166	1252	1342	1435
	<b>50 ft</b>	1542	1656	1775	1897	2024	2154
<b>2000</b>	<b>Grnd Roll</b>	1104	1192	1283	1378	1476	1578
	<b>50 ft</b>	1690	1815	1945	2079	2218	2361
<b>3000</b>	<b>Grnd Roll</b>	1215	1312	1412	1517	1625	1738
	<b>50 ft</b>	1854	1991	2133	2281	2433	2590
<b>4000</b>	<b>Grnd Roll</b>	1339	1446	1556	1671	1791	1915
	<b>50 ft</b>	2036	2186	2342	2504	2672	2844
<b>5000</b>	<b>Grnd Roll</b>	1477	1595	1717	1844	1975	2112
	<b>50 ft</b>	2237	2403	2574	2752	2936	3126
<b>6000</b>	<b>Grnd Roll</b>	1631	1761	1896	2036	2181	2332
	<b>50 ft</b>	2461	2643	2832	3028	3230	3440
<b>7000</b>	<b>Grnd Roll</b>	1803	1946	2095	2250	2411	2577
	<b>50 ft</b>	2710	2911	3119	3335	3558	3788
<b>8000</b>	<b>Grnd Roll</b>	2017	2178	2344	2518	2697	2884
	<b>50 ft</b>	3021	3245	3477	3718	3967	4224
<b>9000</b>	<b>Grnd Roll</b>	2278	2459	2647	2843	3046	3257
	<b>50 ft</b>	3399	3651	3913	4184	4464	4754
<b>10000</b>	<b>Grnd Roll</b>	2575	2779	2992	3213	3442	3681
	<b>50 ft</b>	3827	4112	4406	4711	5027	5353
							3693

# CIRRUS ABBREVIATED CHECKLIST

MODEL SR20

## Cruise Performance

**Conditions:**

- Mixture ..... Target Fuel Flow\*
- Weight ..... 2600 LB
- Winds ..... Zero
- Shaded Cells: Cruise Pwr above 85% not recommended.

\*For power settings greater than 75% power, Best Power.

**• Note •**

Subtract 10 KTAS if nose wheel pant and fairing removed. Lower KTAS by 10% if nose and main wheel pants and fairings are removed.

*Aircraft with optional Air Conditioning System:* Cruise performance is reduced by 2 knots. For maximum performance, turn air conditioner off.

*Aircraft with optional Enhanced Vision System:* Cruise performance is reduced by up to 1 knot.

PRESS ALT FT	RPM	MAP	ISA - 30 °C			ISA			ISA + 30 °C		
			PWR	KTAS	GPH	PWR	KTAS	GPH	PWR	KTAS	GPH
2000	2700	27.1	94%	151	16.5	90%	156	15.8	85%	158	15.2
	2500	27.1	86%	148	14.9	82%	151	14.2	78%	153	13.7
	2500	26.0	81%	145	14.2	77%	148	13.6	73%	150	11.5
	2500	24.9	77%	142	13.5	73%	144	12.3	69%	146	10.9
	2500	23.8	72%	139	13.3	68%	140	11.6	65%	142	10.3
	2500	22.7	67%	135	12.5	64%	136	10.9	61%	138	9.7
	2500	21.6	62%	130	11.7	59%	132	10.3	56%	132	9.1
	2500	20.5	58%	126	11.0	55%	127	9.6	52%	127	8.5
	2500	19.4	53%	121	10.2	50%	121	9.0	48%	121	8.0
4000	2700	25.2	88%	152	15.6	84%	155	14.9	80%	157	14.4
	2500	25.2	80%	147	14.1	76%	150	13.4	73%	152	11.2
	2500	24.1	76%	144	13.4	72%	146	12.0	68%	148	10.6
	2500	23.0	71%	140	13.0	67%	142	11.3	64%	144	10.0
	2500	21.9	66%	136	12.2	63%	138	10.6	60%	139	9.4
	2500	20.8	61%	132	11.4	58%	133	9.9	55%	134	8.8
	2500	19.7	57%	127	10.6	54%	128	9.3	51%	128	8.2
	2500	18.6	52%	121	9.9	49%	122	8.6	47%	122	7.7
	2500	17.5	47%	115	9.1	45%	115	8.0	42%	115	7.1

# CIRRUS ABBREVIATED CHECKLIST

MODEL SR20

## Cruise Performance

PRESS ALT FT	ISA - 30 °C					ISA			ISA + 30 °C		
	RPM	MAP	PWR	KTAS	GPH	PWR	KTAS	GPH	PWR	KTAS	GPH
6000	2700	23.4	82%	151	14.7	78%	154	14.1	74%	156	11.4
	2500	23.4	75%	146	13.5	71%	148	11.7	68%	150	10.4
	2500	22.3	70%	142	12.7	66%	144	11.0	63%	145	9.7
	2500	21.2	65%	138	11.9	62%	140	10.3	59%	141	9.1
	2500	20.1	60%	133	11.1	57%	135	9.7	55%	136	8.6
	2500	19.0	56%	128	10.3	53%	129	9.0	50%	129	8.0
	2500	17.9	51%	123	9.6	48%	123	8.4	46%	123	7.4
8000	2700	21.6	76%	150	13.9	72%	152	11.9	69%	154	10.5
	2500	21.6	70%	144	12.5	66%	146	10.8	63%	148	9.5
	2500	20.5	65%	140	11.6	61%	142	10.1	58%	143	8.9
	2500	19.4	60%	135	10.9	57%	137	9.4	54%	137	8.4
	2500	18.3	55%	130	10.1	52%	131	8.8	50%	131	7.8
	2500	17.2	50%	124	9.3	48%	124	8.1	45%	124	7.2
10000	2700	20.0	71%	148	12.7	67%	150	11.0	64%	151	9.7
	2500	20.0	65%	142	11.5	61%	144	10.0	58%	145	8.8
	2500	18.9	60%	138	10.7	56%	139	9.3	54%	139	8.2
	2500	17.8	55%	132	9.9	52%	133	8.6	49%	133	7.6
	2500	16.7	50%	126	9.1	47%	126	8.0	45%	126	7.1
	2500	15.6	45%	119	8.4	43%	118	7.3	41%	117	6.5
12000	2700	18.5	66%	146	11.7	62%	147	10.1	59%	148	8.9
	2500	18.5	60%	140	10.6	57%	141	9.2	54%	142	8.1
	2500	17.4	55%	135	9.8	52%	135	8.5	49%	135	7.5
	2500	16.3	50%	128	9.0	47%	128	7.9	45%	128	6.9
	2500	15.2	45%	121	8.3	43%	120	7.2	40%	119	6.4
14000	2700	17.1	61%	143	10.8	57%	144	9.3	54%	145	8.2
	2500	17.1	55%	137	9.8	52%	138	8.5	50%	138	7.5
	2500	16.0	50%	131	9.0	48%	131	7.8	45%	130	6.9
	2500	14.9	45%	123	8.2	43%	123	7.1	41%	121	6.3

# CIRRUS ABBREVIATED CHECKLIST

MODEL SR20

## Landing Distance Table - Flaps 100%

<b>Weight:</b> 3150 LB (1429 kg) <b>Speed over 50 Ft Obstacle:</b> 78 KIAS <b>Flaps:</b> 100% <b>Power:</b> Idle <b>Runway:</b> Dry, Paved, Level			<b>Headwind:</b> Subtract 10% per each 13 knots headwind. <b>Tailwind:</b> Add 10% for each 2 knots tailwind up to 10 knots. <b>Runway Slope:</b> Refer to POH. <b>Dry Grass:</b> Add 20% to ground roll. <b>Wet Grass:</b> Add 60% to ground roll.						
<b>PRESS ALT FT</b>	<b>DISTANCE FT</b>	<b>TEMPERATURE ~ °C</b>							
		<b>0</b>	<b>10</b>	<b>20</b>	<b>30</b>	<b>40</b>	<b>50</b>	<b>ISA</b>	
<b>SL</b>	<b>Grnd Roll</b>	809	838	868	897	927	957	853	
	<b>Total</b>	2557	2609	2663	2717	2773	2829	2636	
<b>1000</b>	<b>Grnd Roll</b>	838	869	900	931	961	992	878	
	<b>Total</b>	2610	2665	2722	2779	2838	2898	2682	
<b>2000</b>	<b>Grnd Roll</b>	870	901	933	965	997	1029	905	
	<b>Total</b>	2666	2725	2785	2846	2907	2970	2731	
<b>3000</b>	<b>Grnd Roll</b>	902	935	968	1001	1034	1067	932	
	<b>Total</b>	2726	2788	2852	2916	2981	3048	2782	
<b>4000</b>	<b>Grnd Roll</b>	936	971	1005	1039	1073	1108	960	
	<b>Total</b>	2790	2856	2923	2991	3060	3130	2837	
<b>5000</b>	<b>Grnd Roll</b>	972	1007	1043	1079	1114	1150	990	
	<b>Total</b>	2858	2928	2999	3070	3143	3217	2894	
<b>6000</b>	<b>Grnd Roll</b>	1009	1046	1083	1120	1157	1194	1021	
	<b>Total</b>	2931	3004	3079	3155	3232	3310	2954	
<b>7000</b>	<b>Grnd Roll</b>	1048	1086	1125	1163	1201	1240	1052	
	<b>Total</b>	3008	3086	3165	3245	3326	3409	3017	
<b>8000</b>	<b>Grnd Roll</b>	1089	1128	1168	1208	1248	1288	1085	
	<b>Total</b>	3091	3173	3256	3341	3427	3513	3084	
<b>9000</b>	<b>Grnd Roll</b>	1131	1173	1214	1255	1297	1338	1119	
	<b>Total</b>	3179	3265	3353	3443	3533	3625	3154	
<b>10000</b>	<b>Grnd Roll</b>	1176	1219	1262	1305	1348	1391	1155	
	<b>Total</b>	3272	3364	3457	3551	3646	3743	3228	

# CIRRUS ABBREVIATED CHECKLIST

MODEL SR20

## Landing Distance Table - Flaps 50%

<b>Weight:</b> 3150 LB (1429 kg) <b>Speed over 50 Ft Obstacle:</b> 82 KIAS <b>Flaps:</b> 50% <b>Power:</b> Idle <b>Runway:</b> Dry, Paved, Level			<b>Headwind:</b> Subtract 10% per each 13 knots headwind. <b>Tailwind:</b> Add 10% for each 2 knots tailwind up to 10 knots. <b>Runway Slope:</b> Refer to POH. <b>Dry Grass:</b> Add 20% to ground roll. <b>Wet Grass:</b> Add 60% to ground roll.						
<b>PRESS ALT FT</b>	<b>DISTANCE FT</b>	<b>TEMPERATURE ~ °C</b>							
		0	10	20	30	40	50	ISA	
<b>SL</b>	<b>Grnd Roll</b>	1029	1066	1104	1141	1179	1217	1085	
	<b>Total</b>	2704	2768	2833	2899	2966	3033	2800	
<b>1000</b>	<b>Grnd Roll</b>	1067	1106	1145	1184	1223	1262	1117	
	<b>Total</b>	2768	2836	2904	2974	3044	3115	2856	
<b>2000</b>	<b>Grnd Roll</b>	1106	1147	1187	1228	1268	1309	1151	
	<b>Total</b>	2837	2908	2980	3053	3127	3202	2915	
<b>3000</b>	<b>Grnd Roll</b>	1148	1190	1232	1274	1316	1358	1186	
	<b>Total</b>	2909	2984	3060	3137	3216	3295	2977	
<b>4000</b>	<b>Grnd Roll</b>	1191	1234	1278	1322	1365	1409	1222	
	<b>Total</b>	2987	3066	3146	3227	3309	3392	3042	
<b>5000</b>	<b>Grnd Roll</b>	1236	1281	1327	1372	1417	1462	1259	
	<b>Total</b>	3069	3152	3236	3322	3408	3496	3111	
<b>6000</b>	<b>Grnd Roll</b>	1283	1330	1377	1424	1471	1518	1298	
	<b>Total</b>	3156	3243	3332	3422	3513	3605	3183	
<b>7000</b>	<b>Grnd Roll</b>	1333	1382	1431	1479	1528	1577	1338	
	<b>Total</b>	3248	3340	3434	3529	3624	3721	3258	
<b>8000</b>	<b>Grnd Roll</b>	1385	1435	1486	1537	1587	1638	1380	
	<b>Total</b>	3346	3443	3542	3642	3742	3844	3338	
<b>9000</b>	<b>Grnd Roll</b>	1439	1492	1544	1597	1650	1702	1424	
	<b>Total</b>	3450	3553	3656	3761	3867	3974	3421	
<b>10000</b>	<b>Grnd Roll</b>	1496	1550	1605	1660	1715	1769	1469	
	<b>Total</b>	3560	3668	3778	3888	4000	4112	3509	

# CIRRUS ABBREVIATED CHECKLIST

MODEL SR20

## Landing Distance Table - Flaps 0%

<b>Weight:</b> 3150 LB (1429 kg) <b>Speed over 50 Ft Obstacle:</b> 87 KIAS <b>Flaps:</b> 0% <b>Power:</b> Idle <b>Runway:</b> Dry, Paved, Level			<b>Headwind:</b> Subtract 10% per each 13 knots headwind. <b>Tailwind:</b> Add 10% for each 2 knots tailwind up to 10 knots. <b>Runway Slope:</b> Refer to POH. <b>Dry Grass:</b> Add 20% to ground roll. <b>Wet Grass:</b> Add 60% to ground roll.					
<b>PRESS ALT FT</b>	<b>DISTANCE FT</b>	<b>TEMPERATURE ~ °C</b>						
		<b>0</b>	<b>10</b>	<b>20</b>	<b>30</b>	<b>40</b>	<b>50</b>	<b>ISA</b>
<b>SL</b>	<b>Grnd Roll</b>	1185	1228	1272	1315	1358	1402	1250
	<b>Total</b>	2971	3037	3105	3174	3243	3314	3071
<b>1000</b>	<b>Grnd Roll</b>	1229	1274	1319	1364	1409	1454	1287
	<b>Total</b>	3038	3108	3179	3252	3325	3399	3130
<b>2000</b>	<b>Grnd Roll</b>	1274	1321	1368	1414	1461	1508	1326
	<b>Total</b>	3109	3183	3258	3335	3412	3490	3191
<b>3000</b>	<b>Grnd Roll</b>	1322	1371	1419	1467	1516	1564	1366
	<b>Total</b>	3185	3263	3342	3422	3504	3586	3256
<b>4000</b>	<b>Grnd Roll</b>	1372	1422	1472	1523	1573	1623	1408
	<b>Total</b>	3265	3348	3431	3515	3601	3688	3323
<b>5000</b>	<b>Grnd Roll</b>	1424	1476	1528	1581	1633	1685	1451
	<b>Total</b>	3351	3437	3525	3614	3704	3795	3395
<b>6000</b>	<b>Grnd Roll</b>	1479	1533	1587	1641	1695	1749	1495
	<b>Total</b>	3441	3533	3625	3719	3814	3910	3470
<b>7000</b>	<b>Grnd Roll</b>	1536	1592	1648	1704	1760	1817	1542
	<b>Total</b>	3537	3634	3731	3830	3930	4031	3548
<b>8000</b>	<b>Grnd Roll</b>	1595	1654	1712	1770	1829	1887	1590
	<b>Total</b>	3640	3741	3844	3948	4053	4159	3631
<b>9000</b>	<b>Grnd Roll</b>	1658	1718	1779	1840	1900	1961	1641
	<b>Total</b>	3748	3855	3963	4073	4183	4295	3718
<b>10000</b>	<b>Grnd Roll</b>	1723	1786	1849	1912	1975	2038	1693
	<b>Total</b>	3863	3976	4090	4205	4322	4439	3809

# CIRRUS ABBREVIATED CHECKLIST

MODEL SR20

## Wind Components

**Conditions:**


- Runway Heading ..... 10°
- Wind Direction ..... 60°
- Wind Velocity ..... 15 Knots

**Example: (See Chart ▶ ▶ ▶)**

- Wind/Flight Path Angle ..... 50°
- Crosswind Component..... 12 Knots
- Headwind Component ..... 10 Knots

**• Note •**

The maximum demonstrated crosswind is 20 knots. Value not considered limiting.

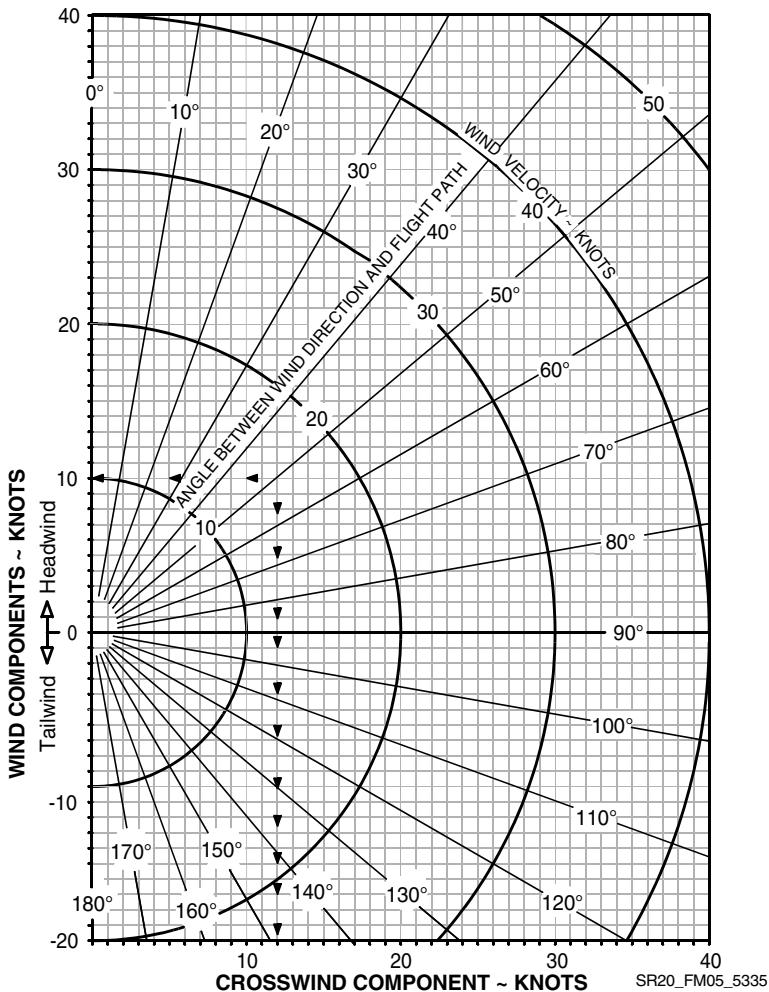

# CIRRUS ABBREVIATED CHECKLIST

MODEL SR20

## Weight and Balance

### Loading Calculations

For Moment/1000, refer to Loading Data table on following page.

Description	Weight	Moment/1000
1. Basic Empty Weight <i>Includes unusable fuel and full oil</i>		
2. Front Seats Occupants <i>Pilot and Passenger (total)</i>		
3. Rear Seats Occupants		
4. Baggage Area <i>130 lb maximum</i>		
5. <b>Zero Fuel Condition Weight</b> <i>Sub total items 1 thru 4</i>		
6. Fuel Loading <i>56 Gallon @ 6.0 lb/gal. maximum</i>		
7. <b>Ramp Condition Weight</b> <i>Sub total items 5 and 6</i>		
8. Fuel for start, taxi, and run-up <i>Normally 9 lb at average moment of 922.8</i>	-	-
9. <b>Takeoff Condition Weight</b> <i>Subtract Item 8 from item 7</i>		

### Calculation Instructions

1. Enter the current basic empty weight and moment from the aircraft's Weight and Balance Record.
2. Enter the total weight and moment/1000 for the front seat occupants from the adjacent Loading Data Table.
3. Enter the total weight and moment/1000 for the rear seat occupants from the adjacent Loading Data Table.
4. Enter the total weight and moment/1000 for the baggage from the adjacent Loading Data Table.
5. If desired, subtotal the weight and moment/1000 entries from steps 1 - 4.
6. Enter the weight and moment/1000 of usable fuel loaded on the airplane.
7. Subtotal the weight and moment/1000.
8. Enter values for typical start, taxi, and run-up operations of 9 pounds at an average moment/1000 of 1.394.
9. Subtract step 8 weight and moment/1000 from the Ramp Condition Weight to determine the Takeoff Condition Weight and moment/1000.
  - a. Verify Takeoff Weight does not exceed the 3150 pounds.
  - b. Verify Moment/1000 falls between the interpolated minimum and maximum values listed on the adjacent Moment Limits Table.

# CIRRUS ABBREVIATED CHECKLIST

MODEL SR20

## Loading Data

Use this table to determine the Moment/1000.

Weight LB	Fwd Pass FS 143.5	Aft Pass FS 180.0	Baggage FS 208.0	Fuel FS 153.8	Weight LB	Fwd Pass FS 143.5	Aft Pass FS 180.0	Fuel FS 153.8
20	2.87	3.60	4.16	3.10	220	31.57	39.60	34.08
40	5.74	7.20	8.32	6.20	240	34.44	43.20	37.18
60	8.61	10.80	12.48	9.29	260	37.31	46.80	40.27
80	11.48	14.40	16.64	12.39	280	40.18	50.40	43.37
100	14.35	18.00	20.80	15.49	300	43.05	54.00	46.47
120	17.22	21.60	24.96	18.59	320	45.92	57.60	49.57
140	20.09	25.20	27.04*	21.69	336**	48.79	61.20	52.05
160	22.96	28.80		24.78	360	51.66	64.80	
180	25.83	32.40		27.88	380	54.53	68.40	
200	28.70	36.00		30.98	400	57.40	72.00	

\* 130 lb Maximum

\*\* 56 U.S. Gallons Usable

## Moment Limits

Use this table to determine if Loading Calculations are within limits.

Weight LB	Moment/1000		Weight LB	Moment/1000	
	Minimum	Maximum		Minimum	Maximum
2200	304	326	2700	375	398
2250	311	333	2750	383	406
2300	318	341	2800	390	414
2350	326	348	2850	398	421
2400	333	354	2900	406	429
2450	340	362	2950	414	437
2500	347	369	3000	421	444
2550	354	375	3050	429	452
2600	362	383	3100	438	459
2650	369	390	3150	445	467

# CIRRUS ABBREVIATED CHECKLIST

MODEL SR20

## Temperature Conversion

To convert from Celsius (°C) to Fahrenheit (°F), find in the shaded columns the number representing the temperature value (°C) to be converted. The equivalent Fahrenheit temperature is read to the right.

► EXAMPLE: 38 °C = 100 °F.

To convert from Fahrenheit (°F) to Celsius (°C), find in the shaded columns the number representing the temperature value (°F) to be converted. The equivalent Celsius temperature is read to the left.

► EXAMPLE: 38 °F = 3 °C.

Temp to Convert °C or °F			Temp to Convert °C or °F			Temp to Convert °C or °F		
°C	◀ ▶	°F	°C	◀ ▶	°F	°C	◀ ▶	°F
-50	<b>-58</b>	-72	-17	<b>2</b>	36	17	<b>62</b>	144
-49	<b>-56</b>	-69	-16	<b>4</b>	39	18	<b>64</b>	147
-48	<b>-54</b>	-65	-14	<b>6</b>	43	19	<b>66</b>	151
-47	<b>-52</b>	-62	-13	<b>8</b>	46	20	<b>68</b>	154
-46	<b>-50</b>	-58	-12	<b>10</b>	50	21	<b>70</b>	158
-44	<b>-48</b>	-54	-11	<b>12</b>	54	22	<b>72</b>	162
-43	<b>-46</b>	-51	-10	<b>14</b>	57	23	<b>74</b>	165
-42	<b>-44</b>	-47	-9	<b>16</b>	61	24	<b>76</b>	169
-41	<b>-42</b>	-44	-8	<b>18</b>	64	26	<b>78</b>	172
-40	<b>-40</b>	-40	-7	<b>20</b>	68	27	<b>80</b>	176
-39	<b>-38</b>	-36	-6	<b>22</b>	72	28	<b>82</b>	180
-38	<b>-36</b>	-33	-4	<b>24</b>	75	29	<b>84</b>	183
-37	<b>-34</b>	-29	-3	<b>26</b>	79	30	<b>86</b>	187
-36	<b>-32</b>	-26	-2	<b>28</b>	82	31	<b>88</b>	190
-34	<b>-30</b>	-22	-1	<b>30</b>	86	32	<b>90</b>	194
-33	<b>-28</b>	-18	0	<b>32</b>	90	33	<b>92</b>	198
-32	<b>-26</b>	-15	1	<b>34</b>	93	34	<b>94</b>	201
-31	<b>-24</b>	-11	2	<b>36</b>	97	36	<b>96</b>	205
-30	<b>-22</b>	-8	3	<b>38</b>	100	37	<b>98</b>	208
-29	<b>-20</b>	-4	4	<b>40</b>	104	38	<b>100</b>	212
-28	<b>-18</b>	0	6	<b>42</b>	108	39	<b>102</b>	216
-27	<b>-16</b>	3	7	<b>44</b>	111	40	<b>104</b>	219
-26	<b>-14</b>	7	8	<b>46</b>	115	41	<b>106</b>	223
-24	<b>-12</b>	10	9	<b>48</b>	118	42	<b>108</b>	226
-23	<b>-10</b>	14	10	<b>50</b>	122	43	<b>110</b>	230
-22	<b>-8</b>	18	11	<b>52</b>	126	44	<b>112</b>	234
-21	<b>-6</b>	21	12	<b>54</b>	129	46	<b>114</b>	237
-20	<b>-4</b>	25	13	<b>56</b>	133	47	<b>116</b>	241
-19	<b>-2</b>	28	14	<b>58</b>	136	48	<b>118</b>	244
-18	<b>0</b>	32	16	<b>60</b>	140	49	<b>120</b>	248

# CIRRUS ABBREVIATED CHECKLIST

MODEL SR20

## Abnormal Procedures

### Table of Contents

#### Perspective+ Crew Alerting System (CAS) Index

CAS Message	Page	CAS Message	Page
OIL PRESS	A-3	AVIONICS OFF	A-9
OIL TEMP	A-3	PFD FAN FAIL	A-9
START ENGAGED	A-4	MFD FAN FAIL	A-9
FUEL LOW TOTAL	A-5	PITOT HEAT FAIL	A-10
FUEL IMBALANCE	A-5	PITOT HEAT REQD	A-10
FUEL IMBALANCE	A-6	FLAPS OVERSPEED	A-11
M BUS 1	A-7	TAKEOFF FLAPS	A-11
M BUS 2	A-7	FLAPS CLIMB	A-12
BATT 1	A-7	BRAKE TEMP	A-13
ALT 1	A-8	PARK BRAKE	A-14
ALT 2	A-8		

Flight Environment .....	A-1
Inadvertent Icing Encounter.....	A-1
Inadvertent IMC Encounter.....	A-1
Door Open In Flight .....	A-1
Abnormal Landings .....	A-2
Landing With Failed Brakes.....	A-2
Landing With Flat Tire .....	A-2
Engine System.....	A-3
Low Idle Oil Pressure .....	A-3
High Oil Temperature .....	A-3
Start Engaged.....	A-4
Fuel System .....	A-5
Low Fuel Quantity.....	A-5
Fuel Imbalance .....	A-5
Electrical System .....	A-7
Low Voltage on Main Bus 1 .....	A-7
Low Voltage on Main Bus 2.....	A-7
Unexpected Discharge on Battery 1 .....	A-7
Low Alternator 1 Output.....	A-8
Low Alternator 2 Output.....	A-8
Integrated Avionics System .....	A-9
Avionics Switch Off.....	A-9
PFD Cooling Fan Failure .....	A-9

**CIRRUS** ABBREVIATED CHECKLIST MODEL SR20

ABNORMAL

**Abnormal Procedures****Table of Contents**

MFD Cooling Fan Failure .....	A-9
Flight Displays Too Dim.....	A-9
Pitot Static System .....	A-10
Pitot Static Malfunction .....	A-10
Pitot Heat Current Sensor .....	A-10
Pitot Heat Required .....	A-10
Flight Control System.....	A-11
Electric Trim/Autopilot Failure.....	A-11
Flap System Exceedance.....	A-11
Flaps Not In Takeoff Configuration.....	A-11
Flaps Not Set For Climb .....	A-12
Landing Gear System .....	A-13
Brake Failure During Taxi.....	A-13
Left/Right Brake Over-Temperature .....	A-13
Other Conditions .....	A-14
Aborted Takeoff.....	A-14
Parking Brake Engaged.....	A-14
Communications Failure .....	A-14

## Flight Environment

### Inadvertent Icing Encounter

1. Pitot Heat.....ON
2. Exit icing conditions. Turn back or change altitude.
3. Cabin Heat.....MAXIMUM
4. Windshield Defrost ..... FULL OPEN
5. Alternate Induction Air .....

### Inadvertent IMC Encounter

1. Airplane Control.... ESTABLISH STRAIGHT AND LEVEL FLIGHT
2. Autopilot..... ENGAGE TO HOLD HEADING AND ALTITUDE
3. Heading .....RESET TO INITIATE 180° TURN

### Door Open In Flight

1. Airplane Control.....MAINTAIN

## Abnormal Landings

### Landing With Failed Brakes

#### ***One brake inoperative***

1. Land on the side of runway corresponding to the inoperative brake.
2. Maintain directional control using rudder and working brake.

#### ***Both brakes inoperative***

1. Divert to the longest, widest runway with the most direct headwind.
2. Land on downwind side of the runway.
3. Use the rudder for obstacle avoidance.
4. Perform *Emergency Engine Shutdown on Ground Checklist*.

### Landing With Flat Tire

#### ***Main Gear***

1. Land on the side of the runway corresponding to the good tire.
2. Maintain directional control with the brakes and rudder.
3. Do not taxi. Stop the airplane and perform a normal *Engine Shutdown*.

#### ***Nose Gear***

1. Land in the center of the runway.
2. Hold the nosewheel off the ground as long as possible.
3. Do not taxi. Stop the airplane and perform a normal *Engine Shutdown*.

## Engine System

### Low Idle Oil Pressure

#### *OIL PRESS Caution*

OIL PRESS

1. If In-Flight.....LAND AS SOON AS PRACTICABLE

### High Oil Temperature

#### *OIL TEMP Caution*

OIL TEMP

1. Power.....REDUCE AS MUCH AS PRACTICAL
2. Airspeed .....INCREASE
3. Mixture .....AS REQUIRED
4. Oil Temperature Gauge .....MONITOR

**CIRRUS** ABBREVIATED CHECKLIST MODEL SR20**Start Engaged*****START ENGAGED Caution*****START ENGAGED*****On-Ground***

1. Ignition Switch ..... DISENGAGE PRIOR TO 10 SECONDS
2. Wait 30 seconds before next start attempt.

*If starter does not disengage (relay or solenoid failure):*

3. BAT 1 Switch ..... OFF
4. Engine ..... SHUTDOWN
5. STARTER Circuit Breaker..... PULL

***In-Flight***

1. Ignition Switch ..... ENSURE NOT STUCK IN START
2. STARTER Circuit Breaker..... PULL
3. Flight..... CONTINUE  
Engine start will not be available at destination.

## Fuel System

### Low Fuel Quantity

#### *FUEL LOW TOTAL Caution*

**FUEL LOW TOTAL**

1. Fuel Quantity Gauges.....CHECK
2. Totalized Fuel Quantity .....CHECK

*If totalized value differs significantly from sensed quantity:*

- a. Initial Fuel Value.....VERIFY AND CORRECT

*If message persists:*

- a. Land as soon as practicable.

### Fuel Imbalance

#### *FUEL IMBALANCE Caution*

**FUEL IMBALANCE**

1. Fuel Quantity Gauges.....CHECK
2. Fuel Pump .....ON

*If Fuel Pump is already ON for vapor suppression, pump should be left in this position for tank switch.*

3. Fuel Selector .....SELECT FULLER TANK
4. Fuel Pump .....AS REQUIRED

*After switching tanks, message will remain until sensed imbalance is less than 7.5 gallons.*

FUEL

**FUEL IMBALANCE Advisory****FUEL IMBALANCE**

1. Fuel Quantity Gauges.....CHECK
2. Fuel Pump .....ON

*If Fuel Pump is already ON for vapor suppression, pump should be left in this position for tank switch.*

3. Fuel Selector .....SELECT FULLER TANK
4. Fuel Pump .....AS REQUIRED

*After switching tanks, message will remain until sensed imbalance is less than 5.5 gallons.*

## Electrical System

### Low Voltage on Main Bus 1

#### *M BUS 1 Caution*

M BUS 1

1. Perform *Alt 1 Caution (Failure)* Checklist.

### Low Voltage on Main Bus 2

#### *M BUS 2 Caution*

M BUS 2

1. Perform *Alt 1 Caution (Failure)* and *Alt 2 Caution (Failure)* Checklists.

### Unexpected Discharge on Battery 1

#### *BATT 1 Caution*

BATT 1

1. Main Bus 1, 2 and Non-Essential Bus Loads ..... REDUCE
2. Main Bus 1, 2 and Essential Bus Voltages ..... MONITOR
3. Land as soon as practicable.

**Low Alternator 1 Output*****ALT 1 Caution (Failure)***ALT 1

1. ALT 1 Circuit Breaker.....CHECK AND SET
2. ALT 1 Switch.....CYCLE  
*If alternator does not reset:*
3. ALT 1 Switch.....OFF
4. Non-Essential Bus Loads .....REDUCE
  - a. If flight conditions permit, consider shedding the following to preserve Battery 1:
    - (1) Air Conditioning
    - (2) Landing Light
    - (3) Convenience Power (aux items plugged into armrest jack)
    - (4) EVS Camera (if installed)
5. Continue Flight, avoiding IMC or night flight as able (reduced power redundancy).

**Low Alternator 2 Output*****ALT 2 Caution (Failure)***ALT 2

1. ALT 2 Circuit Breaker.....CHECK AND SET
2. ALT 2 Switch.....CYCLE  
*If alternator does not reset:*
3. ALT 2 Switch.....OFF
4. Continue Flight, avoiding IMC or night flight as able (reduced power redundancy).

**Integrated Avionics System****Avionics Switch Off*****AVIONICS OFF Caution*****AVIONICS OFF**

1. AVIONICS Switch ..... ON, AS REQUIRED

**PFD Cooling Fan Failure*****PFD FAN FAIL Advisory*****PFD FAN FAIL**

1. AVIONICS FAN 2 Circuit Breaker ..... CYCLE

*If annunciation does not extinguish:*

- a. High cabin temperatures ..... LAND AS SOON AS PRACTICABLE
- b. Low cabin temperatures.....CONTINUE, MONITOR

**MFD Cooling Fan Failure*****MFD FAN FAIL Advisory*****MFD FAN FAIL**

1. AVIONICS FAN 1 Circuit Breaker ..... CYCLE

*If annunciation does not extinguish:*

- a. High cabin temperatures ..... LAND AS SOON AS PRACTICABLE
- b. Low cabin temperatures.....CONTINUE, MONITOR

**Flight Displays Too Dim**

1. INSTRUMENT dimmer knob ..... OFF (FULL COUNTER-CLOCKWISE)

*If flight displays do not provide sufficient brightness:*

2. Revert to standby instruments.

## Pitot Static System

### Pitot Static Malfunction

#### *Static Source Blocked*

1. Pitot Heat.....ON
2. Alternate Static Source.....OPEN

#### *Pitot Tube Blocked*

1. Pitot Heat.....ON

### Pitot Heat Current Sensor

#### *PITOT HEAT FAIL Caution*

PITOT HEAT FAIL

1. Pitot Heat Circuit Breaker ..... CYCLE
2. Pitot Heat..... CYCLE OFF, ON  
*If inadvertent icing encountered, perform Inadvertent Icing Encounter Checklist and:*
  - a. Airspeed ..... EXPECT NO RELIABLE INDICATION
  - b. Exit icing conditions using attitude, altitude, and power instruments.

### Pitot Heat Required

#### *PITOT HEAT REQD Caution*

PITOT HEAT REQD

1. Pitot Heat.....ON

## Flight Control System

### Electric Trim/Autopilot Failure

1. Airplane Control.....MAINTAIN MANUALLY
2. Autopilot (if engaged).....DISENGAGE  
*If Problem Is Not Corrected:*
3. Circuit Breakers .....PULL AS REQUIRED
  - PITCH TRIM
  - ROLL TRIM
  - AP SERVOS
4. Power Lever.....AS REQUIRED
5. Control Yoke .....MANUALLY HOLD PRESSURE
6. Land as soon as practicable.

### Flap System Exceedance

#### *FLAPS OVERSPEED Caution*

FLAPS OVERSPEED

1. Airspeed .....REDUCE  
*or*
1. Flaps.....RETRACT

### Flaps Not In Takeoff Configuration

#### *TAKEOFF FLAPS Caution*

TAKEOFF FLAPS

1. Takeoff .....ABORT
2. Aircraft Control.....MAINTAIN
3. Aircraft Configuration.....CHECK

**CIRRUS** ABBREVIATED CHECKLIST      MODEL SR20

---

**Flaps Not Set For Climb*****FLAPS CLIMB Advisory*****FLAPS CLIMB**

1. Flaps..... UP

## Landing Gear System

### Brake Failure During Taxi

1. Engine Power ..... AS REQUIRED
  - To stop airplane - REDUCE
  - If necessary for steering - INCREASE
2. Directional Control ..... MAINTAIN WITH RUDDER
3. Brake Pedal(s) ..... PUMP  
*If directional control can not be maintained:*
4. Ignition Switch ..... OFF

### Left/Right Brake Over-Temperature

#### **BRAKE TEMP Caution**

BRAKE TEMP

1. Stop aircraft and allow the brakes to cool.

**CIRRUS** ABBREVIATED CHECKLIST MODEL SR20**Other Conditions****Aborted Takeoff**

1. Power Lever..... IDLE
2. Brakes..... AS REQUIRED

**Parking Brake Engaged*****PARK BRAKE Caution***

PARK BRAKE

1. Parking Brake ..... RELEASE
2. Monitor CAS for BRAKE TEMP Caution. Stop aircraft and allow the brakes to cool if necessary.

**Communications Failure**

1. Switches, Controls..... CHECK
2. Frequency..... CHANGE
3. Circuit Breakers ..... SET
4. Headset ..... CHANGE
5. Handheld Microphone (if installed) ..... CONNECT

# CIRRUS ABBREVIATED CHECKLIST

MODEL SR20

EMRGNCY

## Emergency Procedures

### Table of Contents

#### Perspective+ Crew Alerting System (CAS) Index

CAS Message	Page	CAS Message	Page
OIL PRESS	E-7	M BUS 1	E-12
OIL TEMP	E-7	M BUS 2	E-12
CHT	E-8	ESS BUS	E-13
RPM	E-9	CO LVL HIGH	E-14
FUEL LOW LEFT	E-10	SPIN SPIN SPIN	E-16
FUEL LOW RIGHT	E-10	BRAKE TEMP	E-17
FUEL LOW TOTAL	E-10	START ENGAGED	E-18
FUEL IMBALANCE	E-11		

Airspeeds For Emergency Operations .....	E-1
Maximum Glide.....	E-1
Memory Items.....	E-1
Engine Failures .....	E-2
Engine Failure On Takeoff (Low Altitude).....	E-2
Engine Failure In Flight.....	E-2
Airstart.....	E-3
Engine Airstart.....	E-3
Smoke and Fire.....	E-4
Cabin Fire In Flight .....	E-4
Engine Fire In Flight .....	E-4
Wing Fire In Flight .....	E-5
Engine Fire During Start.....	E-5
Smoke and Fume Elimination.....	E-5
Emergency Descent.....	E-6
Emergency Descent .....	E-6
Forced Landings .....	E-6
Emergency Landing w/o Engine Power.....	E-6
Ditching.....	E-6
Landing Without Elevator Control.....	E-6
Engine System.....	E-7
Engine Partial Power Loss .....	E-7
Oil Pressure Out of Range .....	E-7
Oil Temperature High .....	E-7
High Cylinder Head Temperature.....	E-8
Propeller System Emergencies.....	E-9
Engine Speed High.....	E-9

**CIRRUS** ABBREVIATED CHECKLIST MODEL SR20

EMRGNCY

**Emergency Procedures****Table of Contents**

Propeller Governor Failure .....	E-9
Fuel System Emergencies .....	E-10
Low Fuel Quantity in Left Tank.....	E-10
Low Fuel Quantity in Right Tank .....	E-10
Low Fuel Quantity.....	E-10
Fuel Imbalance .....	E-11
Electrical System Emergencies.....	E-12
High Voltage on Main Bus 1 .....	E-12
High Voltage on Main Bus 2.....	E-12
High or Low Voltage on Essential Bus .....	E-13
Environmental System Emergencies .....	E-14
Carbon Monoxide Level High .....	E-14
Integrated Avionics System.....	E-15
Attitude & Heading Reference System (AHRS) Failure.....	E-15
Air Data Computer (ADC) Failure.....	E-15
PFD Display Failure.....	E-15
Unusual Attitude Emergencies .....	E-16
Inadvertent Spin Entry .....	E-16
SPIN SPIN SPIN Warning .....	E-16
Inadvertent Spiral Dive During IMC Flight .....	E-16
Other Emergencies .....	E-17
Power Lever Linkage Failure.....	E-17
Emergency Engine Shutdown On Ground .....	E-17
Left/Right Brake Over-Temperature .....	E-17
Start Engaged.....	E-18
Emergency Ground Egress .....	E-18
CAPS Deployment .....	E-19
Circuit Breaker Panel .....	E-20

**CIRRUS** ABBREVIATED CHECKLIST

MODEL SR20

**Airspeeds For Emergency Operations*****Maneuvering Speed:***


- 3150 lb (1429 kg) ..... 133 KIAS
- 2700 lb (1225 kg) ..... 123 KIAS
- 2300 lb (1043 kg) ..... 114 KIAS

***Best Glide (Flaps: UP):***

- 3150 lb (1429 kg) ..... 100 KIAS
- 2600 lb (1179 kg) ..... 92 KIAS

***Emergency Landing:***

- Flaps UP ..... 89 KIAS
- Flaps 50% ..... 83 KIAS
- Flaps 100% ..... 78 KIAS

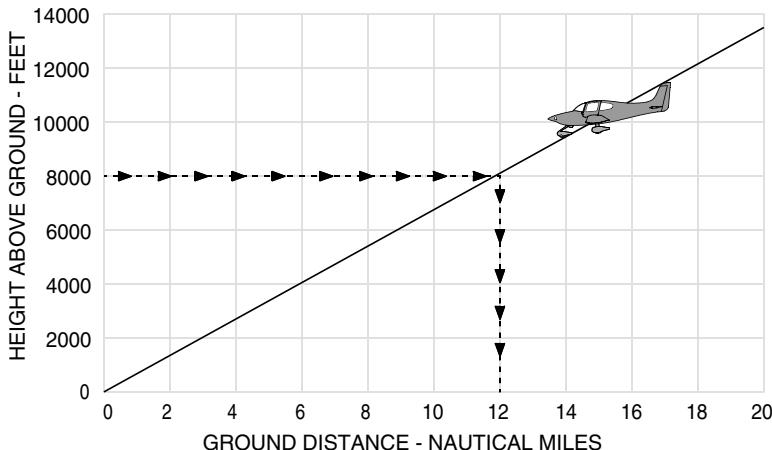**Maximum Glide*****Glide Ratio ~ 9 : 1***

SR20\_FM09\_2765

**Memory Items**

Checklist steps emphasized by underlining such as the example below, should be memorized for accomplishment without reference to the procedure.

1. Best Glide Speed ..... ESTABLISH

**Engine Failures****Engine Failure On Takeoff (Low Altitude)**

1. Best Glide or Landing Speed.....ESTABLISH
2. Mixture.....CUTOFF
3. Fuel Selector .....OFF
4. Ignition Switch .....OFF
5. Flaps.....AS REQUIRED  
*If time permits:*
6. Power Lever ..... IDLE
7. Fuel Pump ..... OFF
8. Seat Belts ..... ENSURE SECURED
9. BAT 1, BAT 2, ALT 1, and ALT 2 Switches ..... OFF

**Engine Failure In Flight**

1. Best Glide Speed.....ESTABLISH
2. Mixture.....AS REQUIRED
3. Fuel Pump .....ON
4. Fuel Selector .....SWITCH TANKS
5. Alternate Induction Air .....ON
6. Ignition Switch ..... CHECK LEFT, RIGHT, BOTH (AS REQ'D)  
*If engine does not start:*
7. Perform Engine Airstart, CAPS Deployment, or Emergency Landing w/o Engine Power Checklist, as required.  
*If engine starts:*
8. CHT and Oil Temperature.. WARM ENGINE AT PARTIAL POWER  
IF REQUIRED

**CIRRUS** ABBREVIATED CHECKLIST

MODEL SR20

**Airstart****Engine Airstart**

1. BAT 1 and BAT 2 Switches ..... ON
2. Power Lever ..... OPEN  $\frac{1}{2}$  INCH
3. Mixture ..... RICH, AS REQ'D
4. Fuel Pump ..... ON
5. Fuel Selector ..... SWITCH TANKS
6. Ignition Switch ..... BOTH
7. Alternate Induction Air ..... ON
8. ALT 1 and ALT 2 Switches ..... OFF
9. Starter (Propeller not Windmilling) ..... ENGAGE
10. Power Lever ..... SLOWLY INCREASE
11. ALT 1 and ALT 2 Switches ..... ON
12. CHT and Oil Temperature.. WARM ENGINE AT PARTIAL POWER  
IF REQUIRED
13. If engine will not start, perform *Emergency Landing w/o Power Checklist.*

AIRSTART

**CIRRUS** ABBREVIATED CHECKLIST MODEL SR20**Smoke and Fire****Cabin Fire In Flight**

1. BAT 1, ALT 1, and ALT 2 Switches ..... OFF, AS REQ'D
2. Fire Extinguisher..... ACTIVATE
3. AVIONICS Switch ..... OFF
4. All other switches..... OFF
5. Land as soon as possible.

*If setting master switches off eliminated source of fire or fumes and airplane is in night, weather, or IFR conditions:*

6. Airflow Selector..... OFF
7. BAT 1, BAT 2, ALT 1, and ALT 2 Switches..... ON
8. AVIONICS Switch ..... ON
9. Required Systems ..... ACTIVATE ONE AT A TIME
10. Temperature Selector ..... COLD
11. Vent Selector ..... FEET/PANEL/DEFROST POSITION
12. Airflow Selector..... SET AIRFLOW TO MAXIMUM
13. Panel Eyeball Outlets ..... OPEN
14. Land as soon as possible.

**Engine Fire In Flight**

1. Mixture ..... CUTOFF
2. Fuel Pump ..... OFF
3. Fuel Selector ..... OFF
4. Airflow Selector..... OFF
5. Power Lever..... IDLE
6. Ignition Switch ..... OFF
7. Land as soon as possible.

**CIRRUS** ABBREVIATED CHECKLIST

MODEL SR20

**Wing Fire In Flight**

1. Pitot Heat Switch ..... OFF
2. Navigation Light Switch ..... OFF
3. Landing Light ..... OFF
4. Strobe Light Switch ..... OFF
5. If possible, side slip to keep flames away from fuel tank and cabin.
6. Land as soon as possible.

**Engine Fire During Start**

1. Mixture ..... CUTOFF
2. Fuel Pump ..... OFF
3. Fuel Selector ..... OFF
4. Power Lever ..... FORWARD
5. Starter ..... CRANK
6. If flames persist, perform *Emergency Engine Shutdown on Ground* and *Emergency Ground Egress Checklists*.

**Smoke and Fume Elimination**

1. Air Conditioner (if installed) ..... OFF
2. Temperature Selector ..... COLD
3. Vent Selector ..... FEET/PANEL/DEFROST POSITION
4. Airflow Selector ..... SET AIRFLOW TO MAXIMUM  
*If source of smoke and fume is firewall forward:*
  - a. Airflow Selector ..... OFF
5. Panel Eyeball Outlets ..... OPEN
6. Land as soon as possible.

SMOKE  
AND FIRE

# CIRRUS ABBREVIATED CHECKLIST

MODEL SR20

## Emergency Descent

### Emergency Descent

1. Power Lever ..... IDLE
2. Mixture ..... AS REQUIRED
3. Airspeed .....  $V_{NE}$

## Forced Landings

### Emergency Landing w/o Engine Power

1. Best Glide Speed ..... ESTABLISH
2. Radio ..... TRANSMIT (121.5 MHZ) MAYDAY  
GIVING LOCATION AND INTENTIONS
3. Transponder ..... SQUAWK 7700
4. Power Lever ..... IDLE
5. Mixture ..... CUTOFF
6. Fuel Selector ..... OFF
7. Ignition Switch ..... OFF
8. Fuel Pump ..... OFF
9. Flaps (when landing is assured) ..... 100%
10. Seat Belt(s) ..... SECURED
11. BAT 1, BAT 2, ALT 1, and ALT 2 Switches ..... OFF

### Ditching

1. Radio ..... TRANSMIT (121.5 MHZ) MAYDAY  
GIVING LOCATION AND INTENTIONS
2. Transponder ..... SQUAWK 7700
3. CAPS ..... ACTIVATE
4. Airplane ..... EVACUATE
5. Flotation Devices ..... INFLATE WHEN CLEAR OF AIRPLANE

### Landing Without Elevator Control

1. Flaps ..... 50%
2. Trim ..... 80 KIAS
3. Power ..... AS REQUIRED FOR GLIDE ANGLE

**CIRRUS** ABBREVIATED CHECKLIST

MODEL SR20

**Engine System****Engine Partial Power Loss**

1. Air Conditioner (if installed) ..... OFF
2. Fuel Pump ..... ON
3. Fuel Selector ..... SWITCH TANKS
4. Mixture ..... CHECK APPROPRIATE FOR FLIGHT CONDITIONS
5. Power Lever ..... SWEEP
6. Alternate Induction Air ..... ON
7. Ignition Switch ..... BOTH, L, THEN R
8. Land as soon as practicable.

**Oil Pressure Out of Range****OIL PRESS Warning**

OIL PRESS

1. Oil Pressure Gauge ..... CHECK  
*If pressure low / high:*
  - a. Power ..... REDUCE TO MINIMUM FOR SUSTAINED FLIGHT
  - b. Land as soon as possible.
    - (1) Prepare for potential engine failure.

**Oil Temperature High****OIL TEMP Warning**

OIL TEMP

1. Power ..... REDUCE
2. Airspeed ..... INCREASE
3. Mixture ..... AS REQUIRED
4. Oil Temperature Gauge ..... MONITOR  
*If message persists:*
  - a. Land as soon as possible.

ENGINE

**CIRRUS** ABBREVIATED CHECKLIST MODEL SR20**High Cylinder Head Temperature*****CHT Caution and Warning***CHT***On-Ground***

1. Power Lever ..... REDUCE
2. Annunciations and Engine Temperatures ..... MONITOR  
*If Caution or Warning annunciation is still illuminated:*
3. Power Lever ..... MINIMUM REQUIRED
4. Flight ..... PROHIBITED

***In-Flight***

1. Power Lever ..... REDUCE
2. Airspeed ..... INCREASE
3. Mixture ..... ADJUST FUEL FLOW TO TOP OF GREEN ARC
4. Annunciations and Engine Temperatures ..... MONITOR  
*If Caution or Warning annunciation is still illuminated:*
5. Power Lever ..... MINIMUM REQUIRED
6. Engine Instruments ..... MONITOR  
*If Caution annunciation only remains illuminated:*
  - a. Land as soon as practicable.*If Warning annunciation remains illuminated:*
  - a. Land as soon as possible.

**CIRRUS** ABBREVIATED CHECKLIST

MODEL SR20

**Propeller System Emergencies****Engine Speed High****RPM Warning**RPM

1. Tachometer ..... CHECK  
*If engine speed normal:*
  - a. If On-Ground ..... CORRECT PRIOR TO FLIGHT
  - b. If In-Flight ..... CONTINUE, MONITOR*If engine speed high:*
  - a. Perform *Propeller Governor Failure Checklist*.
2. Oil Pressure Gauge ..... CHECK

**Propeller Governor Failure*****Propeller RPM will not increase:***

1. Oil Pressure ..... CHECK
2. Land as soon as practicable.

***Propeller overspeeds or will not decrease:***

1. Power Lever ..... ADJUST (TO KEEP RPM IN LIMITS)
2. Airspeed ..... REDUCE TO 90 KIAS
3. Land as soon as practicable.

## Fuel System Emergencies

### Low Fuel Quantity in Left Tank

***FUEL LOW LEFT Warning***

FUEL LOW LEFT

1. Fuel Quantity Gauges.....CHECK
2. Fuel Pump .....ON
3. Fuel Selector .....RIGHT TANK

### Low Fuel Quantity in Right Tank

***FUEL LOW RIGHT Warning***

FUEL LOW RIGHT

1. Fuel Quantity Gauges.....CHECK
2. Fuel Pump .....ON
3. Fuel Selector .....LEFT TANK

### Low Fuel Quantity

***FUEL LOW TOTAL Warning***

FUEL LOW TOTAL

1. Fuel Quantity Gauges.....CHECK
2. Totalized Fuel Quantity .....CHECK  
*If totalized fuel quantity differs significantly from sensed quantity:*
  - a. Initial Fuel Value.....VERIFY AND CORRECT  
*If message persists:*
    - a. Land as soon as practicable.

**Fuel Imbalance*****FUEL IMBALANCE Warning***

FUEL

**FUEL IMBALANCE**

1. Fuel Quantity Gauges.....CHECK
2. Fuel Pump .....ON
3. Fuel Selector .....SELECT FULLER TANK
4. Fuel Pump .....AS REQUIRED

*If the Boost Pump is already in use for vapor suppression, pump should be left in this position for tank switch.*

*After switching tanks, message will remain until sensed imbalance is less than 9.5 gallons.*

## Electrical System Emergencies

### High Voltage on Main Bus 1

#### *M BUS 1 Warning*

M BUS 1

1. ALT 1 Switch ..... CYCLE
2. M Bus 1 Voltage (M1) ..... CHECK  
*If M Bus 1 Voltage is greater than 32 Volts:*
3. ALT 1 Switch ..... OFF
4. Perform *Alt 1 Caution (Failure)* Checklist (do not reset alternator).

### High Voltage on Main Bus 2

#### *M BUS 2 Warning*

M BUS 2

1. Main Bus 1 Voltage (M1) ..... CHECK  
*If M Bus 1 Voltage is greater than 32 Volts:*
2. Perform *M Bus 1 Warning* Checklist.
3. Main Bus 2 Voltage (M2) ..... CHECK  
*If M Bus 2 Voltage is greater than 32 Volts:*
4. ALT 2 Switch ..... CYCLE
5. Main Bus 2 Voltage (M2) ..... CHECK  
*If M Bus 2 Voltage remains greater than 32 Volts:*
6. ALT 2 Switch ..... OFF
7. Perform *Alt 2 Caution (Failure)* Checklist (do not reset alternator).

**High or Low Voltage on Essential Bus*****ESS BUS Warning*****ESS BUS**

1. Essential Bus Voltage (ESS) .....CHECK  
*If Essential Bus Voltage is greater than 32 Volts:*
2. Main Bus 1 and Main Bus 2 Voltages (M1 and M2).....CHECK
3. Perform appropriate *M Bus 1 or M Bus 2 Warning Checklists.*  
*If Essential Bus Voltage is less than 24.5 Volts:*
4. Perform *Alt 1 Caution (Failure)* and *Alt 2 Caution (Failure)* Checklists.  
*If unable to restore at least one alternator:*
5. Non-Essential Loads .....REDUCE
  - a. If flight conditions permit, consider shedding:  
*Air Conditioning, Landing Light, Pitot Heat, Cabin Fan, Nav Lights, Strobe Lights, Audio Panel, COM 2*
6. Land as soon as practicable (Battery reserve only).

ELECTRIC

**Environmental System Emergencies****Carbon Monoxide Level High*****CO LVL HIGH Warning*****CO LVL HIGH**

- ENVIRO
1. Air Conditioner (if installed) .....NOT IN RECIRC MODE
  2. Temperature Selector .....COLD
  3. Vent Selector .....FEET/PANEL/DEFROST POSITION
  4. Airflow Selector.....SET AIRFLOW TO MAXIMUM
  5. Panel Eyeball Outlets .....OPEN  
*If CO LVL HIGH does not extinguish:*
  6. Supplemental Oxygen (if available)
    - a. Oxygen Masks or Cannulas .....DON
    - b. Oxygen System.....ON
    - c. Oxygen Flow Rate.....MAXIMUM
  7. Land as soon as possible.

**Integrated Avionics System Emergencies****Attitude & Heading Reference System (AHRS) Failure**

1. Verify Avionics System has switched to functioning AHRS.

*If not, manually switch to functioning AHRS and attempt to bring failed AHRS back on-line:*

2. Failed ADAHRS Circuit Breaker ..... SET

*If open, reset breaker. If circuit breaker opens again, do not reset.*

3. Be prepared to revert to Standby Instruments (Attitude, Heading).

**Air Data Computer (ADC) Failure**

1. Failed ADAHRS Circuit Breaker ..... SET

*If open, reset (close) circuit breaker. If circuit breaker opens again, do not reset.*

2. Revert to Standby Instruments (Altitude, Airspeed).

3. Land as soon as practicable.

**PFD Display Failure**

1. Display Backup ..... ACTIVATE

2. Land as soon as practicable.

**Unusual Attitude Emergencies****Inadvertent Spin Entry**

1. CAPS.....ACTIVATE

**SPIN SPIN SPIN Warning**

SPIN SPIN SPIN

1. CAPS.....ACTIVATE

**Inadvertent Spiral Dive During IMC Flight**

1. Power Lever ..... IDLE
2. Stop the spiral dive by using coordinated aileron and rudder control while referring to the attitude indicator and turn coordinator to level the wings.
3. Cautiously apply elevator back pressure to bring airplane to level flight attitude.
4. Trim for level flight.
5. Set power as required.
6. Use autopilot if functional otherwise maintain a constant heading through the coordinated aileron and rudder inputs.
7. Exit IMC conditions as soon as possible.

**CIRRUS** ABBREVIATED CHECKLIST

MODEL SR20

**Other Emergencies****Power Lever Linkage Failure**

1. Power Lever Movement ..... VERIFY
2. Power ..... SET IF ABLE
3. Flaps ..... SET IF NEEDED
4. Mixture ..... AS REQUIRED (FULL RICH TO CUTOFF)
5. Land as soon as possible.

**Emergency Engine Shutdown On Ground**

1. Power Lever ..... IDLE
2. Fuel Pump (if used) ..... OFF
3. Mixture ..... CUTOFF
4. Fuel Selector ..... OFF
5. Ignition Switch ..... OFF
6. BAT 1, BAT 2, ALT 1, and ALT 2 Switches ..... OFF

**Left/Right Brake Over-Temperature*****BRAKE TEMP Warning***

BRAKE TEMP

1. Stop aircraft and allow the brakes to cool.

OTHER

**Start Engaged*****START ENGAGED Warning*****START ENGAGED*****On-Ground***

1. Ignition Switch ..... DISENGAGE
2. Wait 1 minute before next start attempt.  
*If starter does not disengage (relay or solenoid failure):*
3. BAT 1 Switch ..... OFF
4. Engine ..... SHUTDOWN
5. STARTER Circuit Breaker..... PULL

***In-Flight***

1. Ignition Switch ..... ENSURE NOT STUCK IN START
2. STARTER Circuit Breaker..... PULL
3. Flight..... CONTINUE  
Engine start will not be available at destination.

**Emergency Ground Egress**

1. Engine ..... SHUTDOWN
2. Seat belts..... RELEASE
3. Airplane ..... EXIT

**CIRRUS** ABBREVIATED CHECKLISTMODEL SR20

---

**CAPS Deployment**

1. Activation Handle Cover ..... REMOVE
2. Activation Handle (Both Hands) ..... PULL STRAIGHT DOWN

*After deployment, as time permits:*

3. Mixture ..... CUTOFF
4. Fuel Selector ..... OFF
5. Fuel Pump ..... OFF
6. BAT 1, BAT 2, ALT 1, and ALT 2 Switches ..... OFF  
Turn the master switches off after completing any necessary radio communications.
7. Ignition Switch ..... OFF
8. ELT ..... ON
9. Seat Belts and Harnesses ..... TIGHTEN
10. Loose Items ..... SECURE
11. Assume emergency landing body position.
12. After the airplane comes to a complete stop, evacuate quickly and move upwind.

CAPS

# Circuit Breaker Panel

