

Three AquaMaster Volcano Units (1.5HP), with Etna pattern

- Installed on or about 8/11/2023, by Water and Wetland of Upton, MA and electrician “K Security Systems of Lynn”.
- The **fountain control box** is located on the side of the larger utility box near the Children’s Garden. See photo below




Just use a “coin” to open this one, it is just used to latch the box

Your KEY fits into this lock.

Inside the FOUNTAINS CONTROL PANEL.

**FOUNTAINS
TIMER**

**LIGHTS
TIMER**

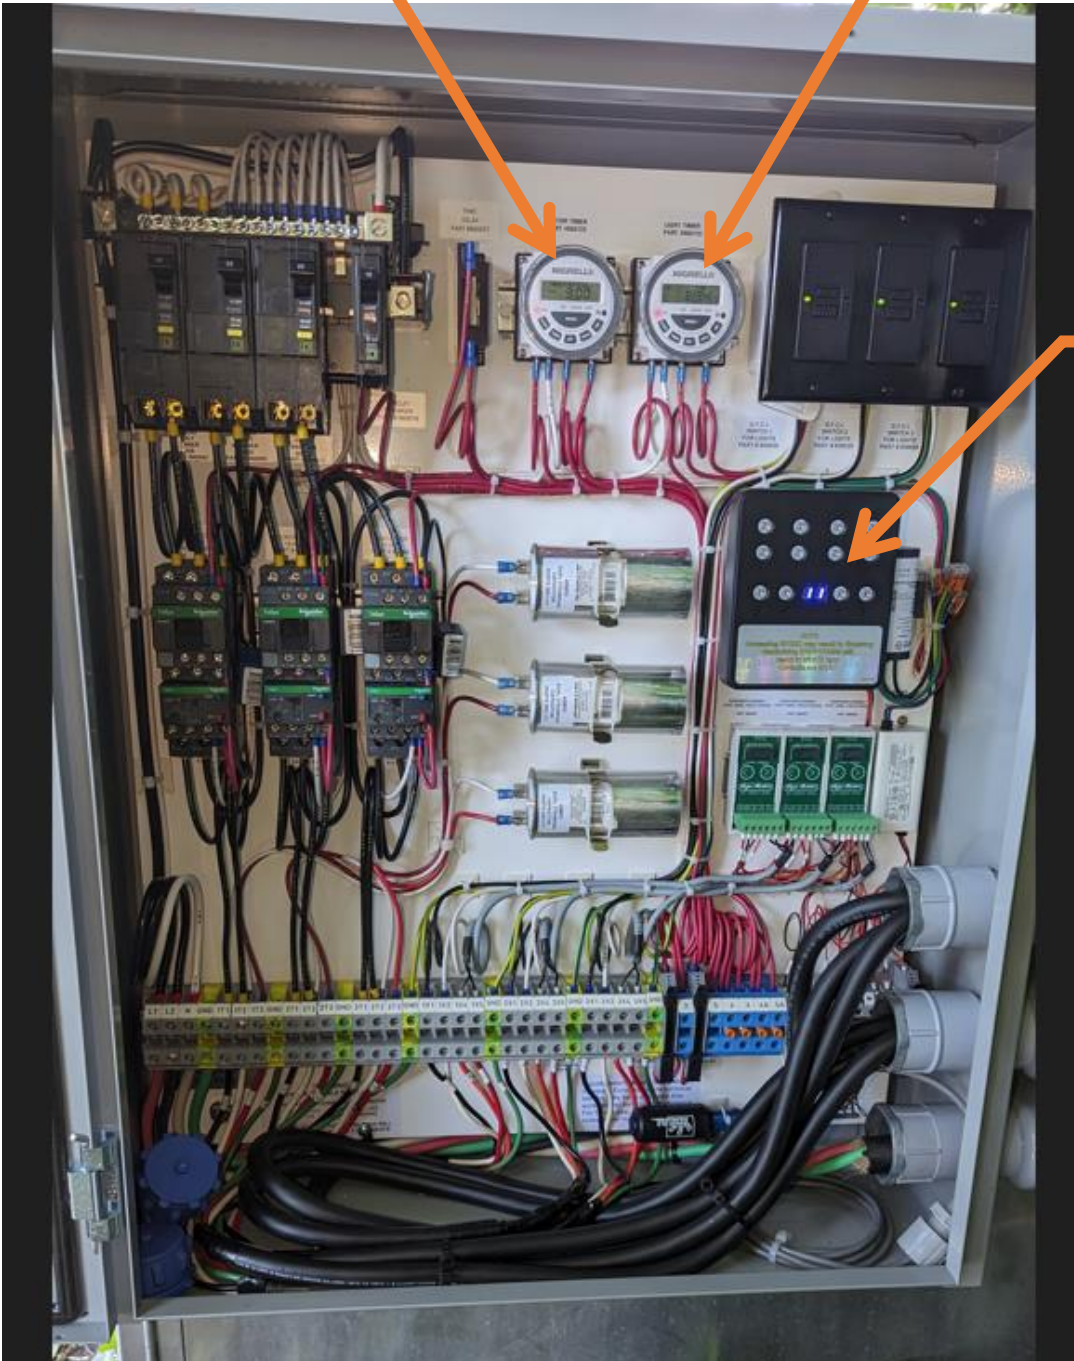

**LIGHTS
"PATTERNS"**

Setting the TIMER DIRECTIONS

- **Troubleshoot:**

- Make sure there is power to the timer "On Button" should be "lit up Red".
- RESET BUTTON. Best sometimes to reset and start over. Use a pencil tip to push the RESET BUTTON. You will then reset Day and Time and your program.

1

DIGITAL TIMER OPERATING INSTRUCTIONS



1. Apply power to turn the timer on.
2. Press RESET to clear all data from memory. Use a pen point to press.

2

SETTING THE CLOCK

1. Press and hold CLOCK.
2. While holding CLOCK, press DAY, HOUR or MINUTE to the desired day / time.

Note: You must advance past 12:00 to set PM.

3. Release CLOCK.

PROGRAMMING

1. There are 15 daily program settings built into the timer.

- a. MO TU WE TH FR SA SU
- b. MO
- c. TU
- d. WE
- e. TH
- f. FR
- g. SA
- h. SU
- i. MO TU WE TH FR
- j. SA SU
- k. MO TU WE TH FR SA
- l. MO TU WE
- m. TH FR SA
- n. MO WE FR
- o. TU TH SA

3

PROGRAMMING (CONT.)

2. Press TIMER once. "1ON --:--" appears.
3. Press DAY repeatedly for desired days ON.
Ex. Mo Tu We Th Fr Sa Su.
4. Press HOUR / MIN repeatedly for desired ON time.
Note: You must advance past 12:00 to set PM.
5. Press TIMER once. "1OFF --:--" appears.
6. Press DAY repeatedly for desired days OFF.
Note: Must match "1ON" day settings.
7. Press HOUR / MIN repeatedly for desired OFF time.
Note: You must advance past 12:00 to set PM.
8. Repeat steps 1 through 7 for more events if desired, up to a maximum of 8 ON/OFF events per day.
9. When finished programming, press CLOCK to execute programs.
10. Press MANUAL until the line is above AUTO.

Note: For 24 hour operation, press the MANUAL button until the line is above "ON". This mode bypasses all programmed settings.

4

PROGRAMMING (CONT.)

Program Example 1

Simple 7 Day Week Program - Timer to turn on at 7:00 AM everyday and off at 11:30 PM everyday.

PROGRAM KEY DISPLAY

EVENT 1 - ON

1. Press TIMER. "1ON --:--" appears.
2. Press DAY until Mo through Su is displayed.
3. Press HOUR until 7:00 AM appears.
4. Use MIN until :00 appears.
5. Press TIMER. "1OFF --:--" appears.

EVENT 1 - OFF

1. Press DAY until Mo though Su is displayed.
2. Press HOUR until 11:00 PM appears.
3. Press MIN until :30 PM appears.
4. Press CLOCK to execute the program.
5. Press MANUAL until the line is above AUTO.

Setting the LIGHTS PATTERNS

- Press the number for desired program, See numbered LIST below.

To Change Programs:

1. If not in scene mode, press the select button (B) until 'SA' appears in the LED display, and press the check button (C) to confirm.
2. Select programs 1-8 directly using the numbered pushbuttons (A).
3. Use the plus (F) and minus (E) buttons to select a program number, and press the check button to confirm.


To Change Program Speed:

1. If not speed mode, press the select button (B) until 'SP' appears in the display (D), and press the check button (C) to confirm.
2. Use the '+' and '-' buttons to increase or decrease speed, and press the check button (C) to confirm.

To Change Program Brightness:

1. If not in dimming mode, press the select button (B) until 'dl' appears in the display (D), and press the check button (C) to confirm.
2. Use the plus (F) and minus (E) buttons to increase or decrease speed, and press the check button (C) to confirm.

NOTE: Decreasing brightness dims all lights, and increasing brightness turns up the white component of the RGBW light.

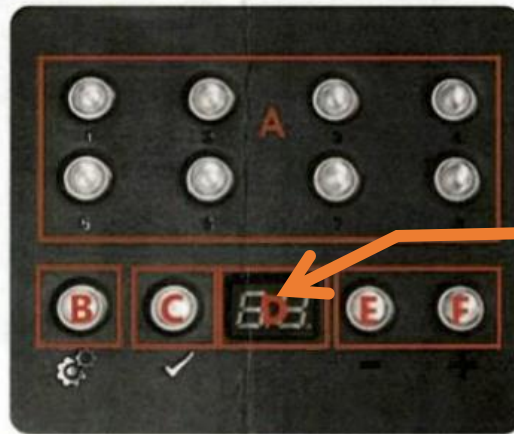

**Program
number
appears here**

Program List:

1. White	20. Yellow
2. New Year's Day	21. Lime
3. Valentine's Day	22. Green
4. Mardi Gras	23. Teal
5. St Patrick's Day	24. Cyan
6. 4 th of July	25. Indigo
7. Breast Cancer Awareness	26. Blue
8. Thanksgiving	27. Violet
9. Hanukkah	28. Magenta
10. Christmas	29. Pink
11. 12 Color Fade	30. Black (Off)
12. Rainbow	31. Warm White
13. Pastel Rainbow	<i>Optional Custom Programs</i>
14. Warm Colors	32. _____
15. Cool Colors	33. _____
16. RGBW	34. _____
17. CMYW	35. _____
18. Red	36. _____
19. Orange	