

RMB EV

MULTI-POINT

Read this manual completely
before assembling and riding our
RMB EV Multi-Point



Owner's Manual

RMB EV
3362 Fulton Road
Fulton, CA 95439 USA
Tel:(707)568-3388 Fax:(707)526-1409
www.rmbev.com

RMB EV

Table of Contents

| | |
|---|----|
| Technical Information----- | 1 |
| Warning Statement----- | 2 |
| Read Before Riding----- | 3 |
| List of Parts----- | 4 |
| Front Bar----- | 6 |
| Tool Kits In The Tool Bag----- | 7 |
| Assembling The Multi-Point----- | 8 |
| Charging The Batteries----- | 12 |
| Charging The Batteries Outside Scooter----- | 13 |
| Riding The Multi-Point----- | 15 |
| Folding The Multi-Point----- | 19 |
| Maintenance----- | 21 |
| Wiring Diagram----- | 22 |
| Trouble Shooting Guide----- | 24 |

Warranty-----26

Instructions for optional attachments-----31

Technical Information

Multi-Point

| | |
|------------------|--|
| Model No. | RMB Multi-Point |
| Product size | 45 L x 27 W x 44 H inch (115 x 68 W x 113 cm) |
| Type of motor | Permanent-magnet brushless DC wheel motor |
| Motor power | 500 w Wheel motor, 48 V |
| Battery type | sealed lead acid battery |
| Battery capacity | 48 Volt, 12Ah |
| Charger | 110V-240V, UL approved |
| Charging time | 4-6 hours |
| Max. speed | Up to 16 MPH (26 km/h) |
| Single charge | Up to 31 MILES (50 km) |
| Max capacity | 310 LBS (158 kg) |
| Net weight | 101 LBS (46 kg) |

Warning Statement

Multi-Point



IMPORTANT!

Before you operate your Multi-point , please read carefully:

YOUR EXISTING INSURANCE POLICY MAY NOT PROVIDE COVERAGE FOR ELECTRIC VEHICLES, YOU SHOULD CONTACT YOUR INSURANCE AGENT TO DETERMINE IF COVERAGE IS PROVIDED.



Do not ride this scooter until you read and thoroughly understand the owners manual. It contains information critical to your safety. If you have any questions about the operation of the scooter, you should consult your authorized dealer.



It is extremely important that you follow the safety guidelines contained in this manual in order to ensure maximum safety.



Failure to comply with the standards outlined in this manual could result in fire and/or serious injury.



RMB EV is not liable for any damage or injuries caused by unsafe or faulty repairs. Any repairs made to this product by unauthorized service technicians are the sole responsibility of the owner.



Our products are designed to be ecologically conscious, please dispose of used batteries in compliance with local laws.

Read Before Riding

Multi-Point

WARNING

THE RMB MULTI-POINT IS NOT A TOY AND SHOULD NOT BE OPERATED BY ANYONE UNDER 12 YEARS OLD.

Safety Instructions:

(Please take note of the following before each ride)

- The maximum weight capacity is 310 lbs.
- Only one person at a time should ride.
- Always wear protective gear including knee and elbow pads and an approved safety helmet when riding the Multi-Point.
- Before riding, be sure to check that all pivot points, locking buttons, quick releases, and latches are secured properly.
- The power switch lock must be in the "off" position when the Multi-Point is being charged.
- Do not use the Multi-Point when it is raining.
- Do not place the battery near heat or fire.
- Do not expose the charger to water or any moisture.
- Check if batteries are properly charged and installed.
- Charge Batteries after each use.
- Always ride on dry paved surfaces. Gravel, wet, extreme incline, and uneven surfaces are a hazard.

Check if all tires are properly inflated.

List of Parts

Multi-Point



List of Parts

Multi-Point

- 1 Throttle
- 2 Multi-function Instrument
- 3 Brake lever
- 4 Alloy handlebar tub
- 5 Quick release
- 6 Connecting tube
- 7 Seat
- 8 Charger port
- 9 Footboard
- 10 Rear wheel
- 11 Battery
- 12 Power connecting plugs
- 13 Allen set screw
- 14 Front fender compartment
- 15 Front fork
- 16 Motor
- 17 Front wheel
- 18 Basket

Front Bar

Multi-Point



- 1 Brake lever
- 2 Lock mechanism switch
- 3 Horn switch
- 4 Multi-function Instrument
- 5 Key switch
- 6 USB port
- 7 Throttle

Tool Kits In The Tool Bag

Multi-Point



- 1 Screwdriver
- 2 Allen wrench (2.5mm)
- 3 Allen wrench (3mm)
- 4 Allen wrench (5mm)
- 5 Allen wrench (6mm)
- 6 Wrench (8 x 10mm)
- 7 Wrench (16 x 18mm)
- 8 Wrench (16 x 18mm)
- 9 charger


Assembling The Multi-Point

Multi-Point

1. Unpack the Multi-Point carefully so that you do not misplace any of the parts.



2. Place the Multi-Point on a flat, level surface. Block the front up 3.5". This will make the next step easier

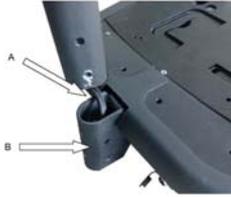

3. Remove the bolts and nuts from the connecting tube clamp (B). Place the connecting tube into the top opening (A). After aligning the holes, place the two bolts through the connecting tube and neck assembly. Twist the bolts, do not hammer them through. Tighten these two bolts with the nuts provided.




Assembling The Multi-Point

Multi-Point

4. The two Allen set screws on the front of the connecting clamp are for removing any play after the bolts have been tightened. First, back off the nuts, second, set the screws, third, tighten the nuts to prevent the screws from backing off.

Two Allen set screws

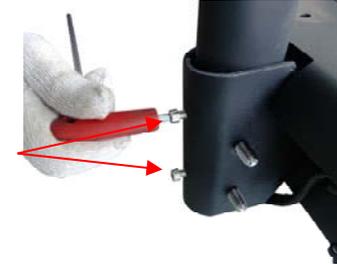

5. Extend the handle bar tube to full upright position, and slide it into connecting with the front fork.



*Note: The tube shaft is intentionally off center to allow handlebars to fold to the side. Be sure to

Assembling The Multi-Point

Multi-Point

align release button to pivot on brake handle side




6. Ensure that the handlebar is facing front, the brake on the left side and the throttle on the right, then tighten the handlebar tube collar clamp using the enclosed 5mm wrench.
7. Plug in the two power connecting plugs into the sockets. The design of each plug and socket is different. Connect the ones which best fit each other to finish the assembly.




8. Match the pins of the plugs to the holes of the sockets. Note the alignment notches.

Assembling The Multi-Point

Multi-Point

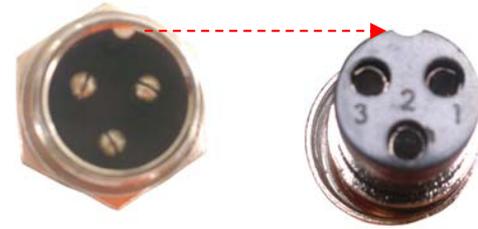

NOTE: Handle bar height adjustment. Handle bar height can be easily adjusted by opening the quick release on the handlebar tube to preferred height, then firmly closing quick release.

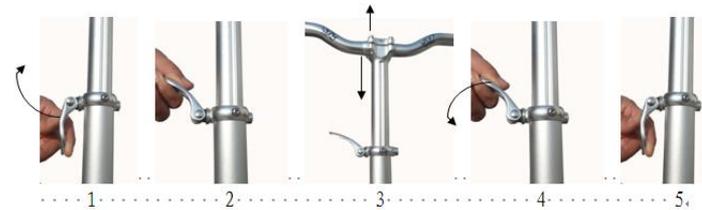

Charging The Batteries

Multi-Point

● Before you ride the Multi-Point for the first time you must charge the batteries for 4-6 hours or until the charger light turns green using only the supplied charger.

Charging The Batteries Outside Scooter

Multi-Point

● To charge the batteries, plug the charger into the charger socket located on the rear deck where the seat post is installed (or with the seat installed, the charge socket under the seat). Then plug the charger into a wall outlet. Red light on charger indicates charging, green light indicates charged.

Warning: Never charge scooter longer than 10 hours. If the charger does not turn green by 10 hours or you smell a Sulphur odor after a long charge there is a problem and contact the dealer for instructions.



12

1. Turn off the key switch.
2. Lift the floor mat. Unscrew two bolts that secure the battery cover and remove it.




3. Unplug the battery connection plug, unlock the battery case, remove the battery, and charge using the optional external charge wire and provided charger.



13

Charging The Batteries Outside Scooter

Multi-Point

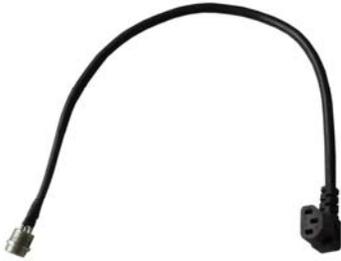

Riding The Multi-Point

Multi-Point

● Once you have completed the initial charge you are ready to ride. Remember, this is not a toy. The Multi-Point can reach speeds up to 16 mph depending on the terrain and the weight of the rider. You must wear a helmet and protective pads. Be aware of all local laws and ordinances that govern and/or restrict the use of powered scooters. The laws and ordinances vary greatly from municipality to municipality. It is your responsibility to know and abide by your local restrictions.

● To ride, insert the key into the key switch and turn the key in clockwise direction till the first click. The battery gauge will be illuminated indicating that the battery is in operation. If you want to turn on the front light, please turn the key to the second click in clockwise direction.



● Hold onto the front bar with both hands. Your left hand will control the brakes and your right

Riding The Multi-Point

Multi-Point

hand will control the throttle. As you turn the throttle towards yourself, the speed will be increased. Release the throttle and apply the brake to stop the scooter. You will control the speed of the scooter by using both the throttle and the brake. **When the brake handle is squeezed it cuts power off the throttle.**

NOTE 1: WARNING: Never try stunts. Always maintain a safe speed.

NOTE 2: When scooter is parked, please remove the key, this will avoid anyone from accidentally turning the throttle causing the scooter to speed forward. Failure to do this could lead to an accident.

NOTE 3: If you need to stop in an emergency or kill power quickly, you can turn the key off.

NOTE 4: Depending on skills of the driver, the Multi-Point comes equipped with an adjustable speed switch located under the left front side of the scooter under the 2 wire connectors which allows you to limit speed to 8mph or switch to max speed of 16 mph.

Riding The Multi-Point

Multi-Point



NOTE 5: When you use reverse, the scooter must be stopped, and then push the reverse switch to "R", the horn will send out a noise, then **GENTLY** turn the throttle to back up. **Warning, do not twist throttle to full power when in reverse.** When finishing reverse, push the reverse switch back to "F".



Riding The Multi-Point

Multi-Point

NOTE 6: The Maximum output of dual port USB part is 5V, 2A which will charge all phones and tablets.



Folding The Multi-Point

Multi-Point

1. Turn off the key switch
2. Put the clamp ring to turn to one side.



3. Press the quick release to bottom.



Folding The Multi-Point

Multi-Point

4. Lift the connecting tube (which is also attached to the handlebar tube).



5. Carefully place the handlebar tube on the footrest frame



Maintenance


Multi-Point

Battery: (for professional use only)

The RMB Multi-Point is powered by 4, 12 volt, rechargeable lead acid batteries housed in a single compartment. Other than recharging, these batteries need no maintenance. To prolong battery life, recharge the battery after each use. You must also charge your Multi-Point if it has not been used for 30 days or more. If you need to replace the battery pack, it is located inside the battery compartment on the footboard. To get to the battery pack, remove the compartment cover by loosening the screws. To remove the batteries disconnect the wires from the battery terminals. Replace the battery pack with a new one and reconnect the wires. Follow the instructions on charging batteries to charge the new batteries.


Wiring Diagram

Multi-Point

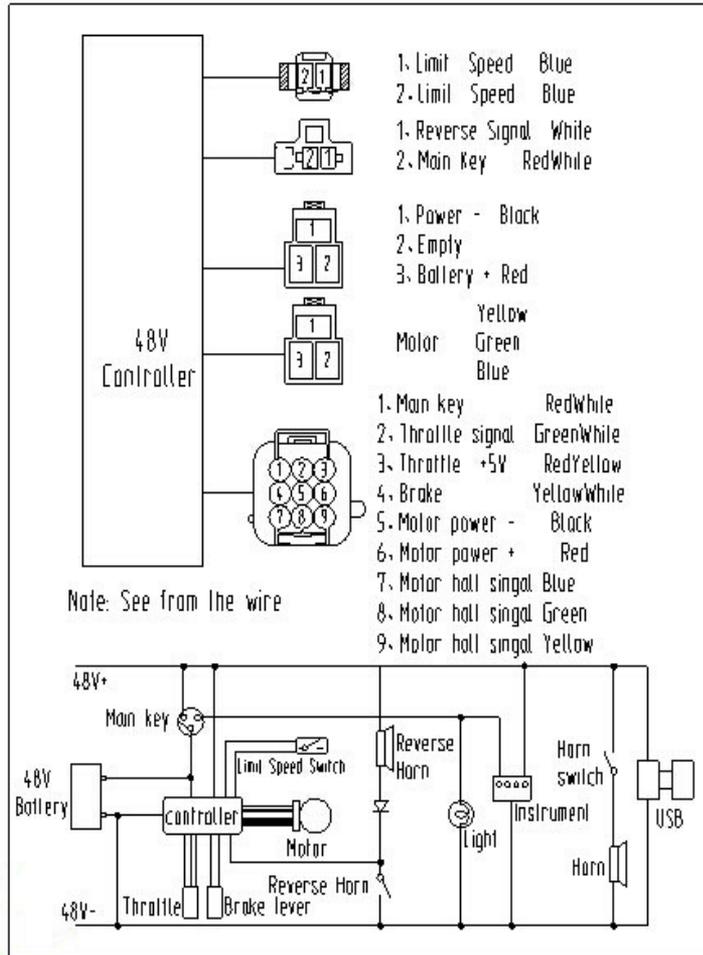

Wiring Diagram

Multi-Point

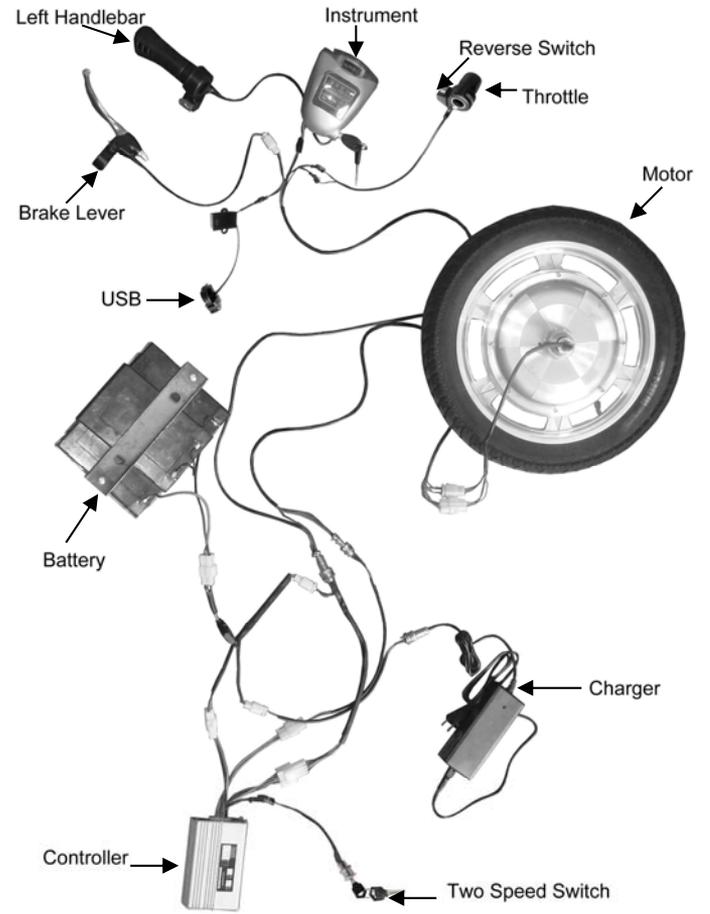

Trouble Shooting Guide

Multi-Point

| Problem | Cause | Solution |
|--|--|---|
| The power light on the instrument does not illuminate when the Multi-Point is on. | <ol style="list-style-type: none"> 1. Battery is discharged. 2. Loose connection inside Multi-Point. 3. Fuse is blown. 4. The instrument is defective. | <ol style="list-style-type: none"> 1. Recharge your Multi-Point. 2. Remove the screws that hold the battery compartment cover and raise the cover. Visually inspect all wire connections making sure there are no loose wires, reconnecting those that are. 3. Replace the fuse. 4. Replace the instrument. |
| The power indicator on the instrument illuminates but Multi-Point still does not work. | <ol style="list-style-type: none"> 1. The throttle handle is not operating properly. | <ol style="list-style-type: none"> 1. Replace the throttle handle. Call Customer Service to order a new throttle |

Trouble Shooting Guide

Multi-Point

| | | |
|---|---|--|
| When the brake lever is squeezed the Multi-Point does not stop. | <ol style="list-style-type: none"> 1. The brakes are not adjusted properly. | <ol style="list-style-type: none"> 1. Adjust the brake by loosening the bolt on the brake wheel, pull the cable and retighten the bolt. |
| Scooter is losing speed. | <ol style="list-style-type: none"> 1. Low battery 2. Battery is defective. 3. Low tire pressure. | <ol style="list-style-type: none"> 1. Recharge your battery for 4~6 hours. 2. Replace battery. Call Customer Service to order a new battery. 3. air tires up to correct pressure. |

Warranty

Multi-Point

The Limited Warranty does not cover or apply to the following: Normal wear and tear; any damage, failure and/or loss caused by accident, misuse, neglect, abuse and/or failure to follow instructions or warnings as stated on the product or in the applicable owner's manual or other printed materials provided with the product; damage, failure and/or loss caused by the use of the product in any other manner for which such products were not specifically designed.

RMB EV warrants the Multi-Point for six (6) months according to the following terms. Batteries and tires are warranted for three (3) months. This warranty extends to the original retail purchaser only and commences on the date of the original retail purchase. Any part of the RMB EV product manufactured or supplied by RMB EV and found in the reasonable judgment of RMB EV to be defective in material or workmanship will be repaired or replaced by an authorized RMB EV service dealer without charge for parts or labor. RMB EV is responsible for the expense of delivering the warranty replacement parts. However, if the customer chooses not to replace the parts, the **expense of**

Warranty

Multi-Point

delivering the Multi-Point to the factory / authorized service dealer for warranty work or the expense of returning it back to the owner after repair/ replacement will be paid for by the owner. RMB EV's responsibility in respect to claims is limited to making the required repairs or replacements and no claim of breach of warranty shall be cause for cancellation or rescission of the contract of sale of any RMB EV product. Proof of date of purchase will be required by the dealer to substantiate any warranty claim. An authorized RMB EV service dealer must perform all warranty work. The warranty is limited to thirty (30) days from the date of purchase for any RMB EV product that is used for rental demonstration, commercial purposes, or any other income producing purpose. This warranty does not cover any RMB EV product that has been subject to misuse, neglect, negligence or accident, or has been operated in any way contrary to the operating instructions as specified in RMB EV's owner's manual. This warranty does not apply to any damage to RMB EV products that is the result of improper maintenance or to any RMB EV product that has been altered or modified so as to

Warranty

Multi-Point

adversely affect the products operation, performance, or durability, or that has been altered or modified to change its intended use. This warranty does not extend to repairs made necessary by normal wear and or by use of parts that are incompatible with RMB EV products. In addition this warranty does not cover items that experience normal wear and tear. RMB EV reserves the right to improve the design of the product without assuming any obligations to modify any product previously manufactured. All warranties are limited in duration to the six (6) months warranty period. Any such implied warranties including merchantability, fitness for a particular purpose or otherwise are disclaimed in their entirety after the expiration of the appropriate thirty day warranty period. RMB EV's obligation under this warranty is strictly and exclusively limited to the repair and replacement of defective parts and RMB EV does not assume any other obligation. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. RMB EV assumes no responsibility for incidental consequential or other damages including but not limited to expense of returning

Warranty

Multi-Point

the Multi-Point to an authorized service dealer and expense of delivering it back to the owner, mechanics travel time, telephone charges, rental of a like product during the time the warranty service is being performed, travel loss, or damage to personal property, loss of revenue, loss of time, or inconvenience. Some states do not allow the exclusion or limitation of incidental or consequential damages so the above limitations may not apply to you.

WHAT RMB EV WILL DO:

RMB EV will, at its sole option, either repair, replace or refund the purchase price of any unit that does not conform to this limited warranty. RMB EV may choose at its option to use functionally equivalent reconditioned, refurbished or new units or parts or any units. You are responsible to get the unit back to RMB EV.

Warranty

Multi-Point

HOW TO GET WARRANTY SERVICE:

To obtain warranty service, please call or fax to the following telephone numbers for RMB EV Customer Service - warranty repair

Tel. 1-707-568-3388 or Fax.1-707-526-1409,
Email: info@rmbev.com

DO NOT RETURN YOUR PRODUCT TO ANY ADDRESS.

Please call, email, or write for the location of the RMB EV authorized service center nearest you and for the procedures for obtaining warranty claims.

Instructions for optional attachments

Multi-Point

Installing the optional dc to ac inverter

1. Turn off the key switch
2. Remove seat post from seat



3. Install special seat post on seat



3. Put floor mat through tube



Instructions for optional attachments

Multi-Point

4. Install quick release, put wire harness through tube



5. Connect wire harness with charger port under tube



6. Install tube on scooter, put one side with hole forward, and fasten bolts

32

Instructions for optional attachments

Multi-Point



7. Align nipples to corresponding holes in floor deck



8. Install seat



33

Instructions for optional attachments

Multi-Point

9. Plug the up connector into the inverter socket,



10. When using the inverter, turn on the power switch.



Inverter specification:

- Input voltage is DC 48V
- Output voltage is AC 110V 60Hz

NOTE 1: Do not expose to water drip or spray.

NOTE 2: Shock hazard. Keep away from children

- Do not insert foreign objects into the inverter's

Instructions for optional attachments

Multi-Point

ac outlet or vent openings.

- Do not under any circumstances. connect the inverter to power utility AC distribution wiring.
- Failure to follow the above instructions may result in personal injury or damage to the inverter.

NOTE 3: Do not expose the inverter to temperatures in excess of 104°F(40°C).

Instructions for optional attachments

Multi-Point

How to install the trailer

1. Turn off the key switch
2. Put the trailer tongue into the slot, after aligning the holes, place the two bolts through the holes. Twist the bolts, and tighten them with the nuts provided.



3. Place the trailer connection plate (A) into the trailer connection frame (B) of front of trailer tongue. After aligning the holes, place the trailer pin through the hole. Secure the trailer pin with the cotter pin.



Instructions for optional attachments

Multi-Point

How to install the solar panel

1. Turn off the key switch
2. Put the front frame(A) and front frame (C) into the front casing (B), after aligning the holes, place the two bolts through the holes and up-clip ring(D), Twist the bolts, and tighten them with the nuts provided.



3. Fix the under-clip ring (A) onto the scooter, and tighten them with the nuts provided.

Instructions for optional attachments

Multi-Point



4. Install front support (A) onto front frame(B) with the two bolts, and tighten them with the nuts provided.



38

Instructions for optional attachments

Multi-Point

5. Install the front support (A) into the under-clip ring (B) with the two bolts, and tighten them with the nuts provided.



6. Install the rear frame onto the scooter with the two bolts, and tighten them with the nuts provided.



39

Instructions for optional attachments

Multi-Point

7. Install the rear support (A) onto rear frame (B) with the two bolts, and tighten them with the nuts provided.



8. Fix the rear support and seat post with one bolt, and tighten them with the nuts provided.



Instructions for optional attachments

Multi-Point

9. Fix the solar panel onto the front frames and rear frames.



the rear frame



the front frame

10. Connect the wiring harness well.



the upper rear frame

Instructions for optional attachments

Multi-Point



the lower rear frame

Instructions for optional attachments

Multi-Point

Instructions on the use of the alarm

1. The first button is the Arm button, when pressing one time gently, the horn will ring one loud, after three seconds, the scooter will be on alert. When touching the scooter firstly, the horn will ring 3 times intermittent, if touching the scooter secondly within 10 seconds, the horn will ring 15 seconds. If forcing to move the scooter, the horn will ring continuously.
2. The second button is the Disarm button. Pressing this key one time gently, the horn will ring two loud, then the alert is removed. It also will shut the horn off if the alarm has been activated.
3. The third button is Start Button, it has no function.
4. The fourth button is Find button, when pressing this key one time gently, the horn will ring three seconds and alerts us the scooter's location, pressing button 2 will stop horn. When pressing this key two seconds, it will become the state of sensitivity adjustment, the horn will ring "Bi" "BiBi" "BiBiBi" "BiBiBiBi", then looping. The number of consecutive chirping represents different

Instructions for optional attachments

Multi-Point

sensitivity, there are four sensitivity, one is most sensitive. When getting to appropriate sensitivity, immediately release Find button, the horn will ring one loud and put on alert (the default is third sensitivity.)



Instructions for optional attachments

Multi-Point

Instructions on the use of the LED rope

When you use the led rope, the head light must be turned on, and then push the led rope switch to "1", the led rope will be illuminate. Push switch "0" to turn off the led rope

